

ACS10-TGU

Intel® 11th Gen Tiger Lake Fanless Compact System

Quick Reference Guide

1st Ed – 04 January 2023

Copyright Notice

Copyright © 2023 Avalue Technology Inc., ALL RIGHTS RESERVED.

FCC Statement



THIS DEVICE COMPLIES WITH PART 15 FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE.

(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS "A" DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES.

THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE WHEN THE EQUIPMENT IS OPERATED IN A COMMERCIAL ENVIRONMENT. THIS EQUIPMENT GENERATES, USES, AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTION MANUAL, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS.

OPERATION OF THIS EQUIPMENT IN A RESIDENTIAL AREA IS LIKELY TO CAUSE HARMFUL INTERFERENCE IN WHICH CASE THE USER WILL BE REQUIRED TO CORRECT THE INTERFERENCE AT HIS OWN EXPENSE.

A Message to the Customer

Avalue Customer Services

Each and every Avalue's product is built to the most exacting specifications to ensure reliable performance in the harsh and demanding conditions typical of industrial environments. Whether your new Avalue device is destined for the laboratory or the factory floor, you can be assured that your product will provide the reliability and ease of operation for which the name Avalue has come to be known.

Your satisfaction is our primary concern. Here is a guide to Avalue's customer services. To ensure you get the full benefit of our services, please follow the instructions below carefully.

Technical Support

We want you to get the maximum performance from your products. So if you run into technical difficulties, we are here to help. For the most frequently asked questions, you can easily find answers in your product documentation. These answers are normally a lot more detailed than the ones we can give over the phone. So please consult the user's manual first.

To receive the latest version of the user's manual; please visit our Web site at:

<http://www.avalue.com.tw/>

Safety Instructions

Warning! *Hot parts can cause severe burns. Do not touch the system while operating or just after stopping.*



Warning! *Class I Equipment. This equipment must be earthed. The power plug must be connected to a properly wired earth ground socket outlet. An improperly wired socket outlet could place hazardous voltages on accessible metal parts.*



Warning! *There is danger of explosion if the battery is mishandled or incorrectly replaced. Replace only with the same type of battery. Do not disassemble it or attempt to recharge it outside the system. Do not crush, puncture, dispose of in fire, short the external contacts, or expose to water or the liquids. Dispose of the battery in accordance with local regulations and instructions from your service provider.*



Content

1. Getting Started	7
1.1 Safety Precautions	7
1.2 Packing List	7
1.3 System Specifications	8
1.4 System Overview.....	12
1.4.1 Front View.....	12
1.4.2 Rear View	12
1.5 System Dimensions.....	14
1.5.1 Front & Top View	14
2. Hardware Configuration	15
2.1 ACS10-TGU connector mapping	16
2.1.1 Serial port 1 connector (COM1).....	16
2.1.2 Serial port 2 connector (COM2).....	17
2.2 ECM-TGUC Overview	18
2.3 ECM-TGUC Jumper and Connector List	19
2.4 ECM-TGUC Jumpers and Connectors settings	21
2.4.1 Serial port 2 pin9 signal select (JRI2).....	21
2.4.2 Clear CMOS (JRTC1).....	21
2.4.3 AT/ATX Input power select (JAT1).....	22
2.4.4 Flash Descriptor Security Override (JME1).....	22
2.4.5 M.2 Key B power level select (JSEL1)	23
2.4.6 LCD inverter connector (JBKL1).....	23
2.4.7 Serial port 1 connector (JCOM1).....	24
2.4.8 Serial port 2 connector (JCOM2).....	24
2.4.9 Serial port 3-6 connector (JCOM3_6).....	25
2.4.10 Serial port 1 in RS-422/485 mode (J422485).....	26
2.4.11 CPU fan connector (JC_FAN1)	26
2.4.12 General purpose I/O connector (JDIO1)	27
2.4.13 SATA Power connector (JSATA_PWR1).....	27
2.4.14 Battery connector (JBAT1)	28
2.4.15 Power connector (JPWR1)	28
2.4.16 LVDS connector (JLVDS1).....	29
2.4.17 USB2.0 connector (JUSB56).....	30
2.4.18 USB2.0 connector (JUSB78).....	30
2.4.19 Front Panel connector (JFP1)	31

2.4.20	PC Buzzer connector (JBZ1).....	31
2.4.21	AMP connector (JAMP1)	32
2.4.22	BIOS connector (JBIOS1)	32
2.4.23	eSPI debug connector (JESPI1).....	33
2.4.24	Audio connector (JAUDIO1)	33
2.4.24.1	Signal Description – Audio connector (JAUDIO1)	33
2.4.25	SIM card slot (JN_SIM1)	34
2.5	Installing Memory, Storage, Wi-Fi card & Wireless module (ACS10-TGU)	35
2.6	Installing M.2 B-Key card-42 to 52 (ACS10-TGU)	36
2.7	Installing Wall-Mount Brackets (ACS10-TGU).....	37
2.8	Installing VESA Mounting (ACS10-TGU).....	38
3	BIOS Setup	39
3.1	Introduction.....	40
3.2	Starting Setup.....	40
3.3	Using Setup	41
3.4	Getting Help.....	42
3.5	In Case of Problems	42
3.6	BIOS setup	43
3.6.1	Main Menu	43
3.6.1.1	System Language	44
3.6.1.2	System Date	44
3.6.1.3	System Time	44
3.6.2	Advanced Menu.....	44
3.6.2.1	CPU Configuration	45
3.6.2.2	Power & Performance	46
3.6.2.2.1	CPU – Power Management Control.....	46
3.6.2.3	PCH-FW Configuration.....	47
3.6.2.3.1	Firmware Update Configuration	47
3.6.2.4	Trusted Computing.....	48
3.6.2.5	APCI Settings	48
3.6.2.6	Super IO Configuration.....	49
3.6.2.6.1	Serial Port 1 Configuration	50
3.6.2.6.2	Serial Port 2 Configuration	50
3.6.2.7	NCT6126D HW Monitor	51
3.6.2.7.1	Smart Fan Mode.....	51
3.6.2.8	S5 RTC Wake Settings	52
3.6.2.9	USB Configuration.....	52
3.6.2.10	Network Stack Configuration.....	53
3.6.2.11	NVMe Configuration	54
3.6.3	Chipset.....	54

ACS10-TGU

3.6.3.1	System Agent (SA) Configuration	55
3.6.3.1.1	Memory Configuration	55
3.6.3.1.2	Graphics Configuration.....	56
3.6.3.1.3	VMD setup menu.....	56
3.6.3.2	PCH-IO Configuration.....	57
3.6.3.2.1	PCI Express Configuration.....	57
3.6.3.2.1.1	PCI Express Root Port 5(M.2 KeyE).....	58
3.6.3.2.1.2	PCI Express Root Port 8(LAN2-I225/I226)	59
3.6.3.2.1.3	PCI Express Root Port 12(M.2 KeyB).....	60
3.6.3.2.2	SATA And RST Configuration	61
3.6.3.2.3	HD Audio Configuration	61
3.6.3.3	Board & Panel Configuration.....	62
3.6.3.3.1	SHOW DMI INFO	63
3.6.4	Security	63
3.6.4.1	Secure Boot.....	64
3.6.4.1.1	Key Management	65
3.6.5	Boot.....	65
3.6.6	Save and exit	66
3.6.6.1	Save Changes and Reset	67
3.6.6.2	Discard Changes and Reset	67
3.6.6.3	Restore Defaults.....	67
3.6.6.4	Launch EFI Shell from filesystem device	67
4.	Drivers Installation.....	68
4.1	Install Chipset Driver	69
4.2	Install VGA Driver	70
4.3	Install ME Driver	71
4.4	Install LAN Driver.....	72
4.5	Install Serial IO Driver.....	74
4.6	Install Audio Driver (For Realtek ALC888S)	75
4.7	Install Realtek Audio Control Driver.....	76

1. Getting Started

1.1 Safety Precautions

Warning!



Always completely disconnect the power cord from your chassis whenever you work with the hardware. Do not make connections while the power is on. Sensitive electronic components can be damaged by sudden power surges. Only experienced electronics personnel should open the PC chassis.

Caution!



Always ground yourself to remove any static charge before touching the CPU card. Modern electronic devices are very sensitive to static electric charges. As a safety precaution, use a grounding wrist strap at all times. Place all electronic components in a static-dissipative surface or static-shielded bag when they are not in the chassis.

1.2 Packing List

- 1 x ACS10-TGU system
- AC to DC adapter (12V/60W)
- Wall Mount
- Component Kits (Screws for M.2 & Wall Mount, 4x Rubber Feet)



If any of the above items is damaged or missing, contact your retailer.

1.3 System Specifications

System Information	
Processor	Intel® Core™ i5-1135G7 (TDP 15W) (Default) Intel® Core™ i3-1115G4 (TDP 15W) (Default) Intel® i7-1165G7 /i7-1185G7E/ i5-1145G7/ Celeron 6305E (TDP 15W) (Project Based)
System Memory	Single 260-Pin SO-DIMM Socket, Max. Up to 32GB DDR4 3200MHz (non ECC only)
I/O Chipset	Tiger Lake SOC integrated
BIOS Information	AMI uEFI BIOS, 256Mbit SPI Flash ROM
Watchdog Timer	H/W Reset, 1sec. – 65535sec./min.1sec. or 1min. step
H/W Status Monitor	CPU temperature monitoring Voltage monitoring
TPM	dTPM 2.0 (NuvoTon NPCT754AADYX) (Default) co-lay Infineon SLB9670VQ2.0 & Z32H330TC-SQN-755
SBC	ECM-TGUC
Expansion	
M.2 (Key-X, Size, Signal)	1-M.2 Key-E, 2230 (PCIe, USB 2.0) 1-M.2 Key-B, 2242/3042/3052 (SATA, USB3.2, USB2.0, with 1 x SIM card slot) *Support one SIM card only (co-lay 1-10Pin FPC connector for uSIM card adapter)
Storage	
M.2 (Key-X, Size, Signal)	1-M.2 Key-B, 2242 SSD (SATA3) 1-M.2 Key-M, 2280 SSD (PCIe 4.0x4)
Edge I/O (Front)	
Power Button	1-PWR On/Off BNT w/ LED
Edge I/O (Rear)	
USB 2.0 Port	3-USB 2.0
USB 3.2 Port	3-USB 3.2 Gen 2
COM Port	1-RS-232/422/485 (Default RS-232) 1-RS-232
DP	2-DP++ 1.4 : 4096 x 2304@60 Hz
RJ-45	2-RJ45
LED	1-Power LED (Green) 1-M.2 storage LED (Orange)
Audio Jack	1-Line-Out

	1-Mic-In																			
DC Jack	1-Lockable DC Jack																			
Antenna	2-Antenna mounting																			
Edge I/O (Right)																				
Antenna	2-Antenna mounting																			
Edge I/O (Left)																				
Antenna	2-Antenna mounting																			
Display																				
Graphic Chipset	Intel® Iris® Xe Graphics (i7-1165G7/ i5-1135G7) Intel® UHD Graphics for 11th Gen Intel® Processors (i3-1115G4)																			
Resolution	DP++ 1.4: 4096x2304@60Hz																			
Audio																				
Audio Codec	RealTek ALC888S-VD2-GR																			
Ethernet																				
LAN Chipset	Intel® Ethernet Connection I219-LM (1G) Intel® Ethernet Controller I225-V (2.5G)																			
Specification	10/100/1000 Gigabit 10/100/1000/2500 Gigabit																			
LED Indicator	2.5G LAN Port (i225-V)																			
	<table border="1"> <thead> <tr> <th colspan="2">ACT/LINK</th> <th colspan="2">SPEED</th> </tr> <tr> <th>LED</th> <th>Definition</th> <th>LED</th> <th>Definition</th> </tr> </thead> <tbody> <tr> <td>Light Off</td> <td>No Link</td> <td>Solid Orange</td> <td>2.5G</td> </tr> <tr> <td>Solid Yellow</td> <td>Connection</td> <td>Solid Green</td> <td>1G/100M</td> </tr> <tr> <td>Flashing</td> <td>Activity</td> <td>Light Off</td> <td>10M</td> </tr> </tbody> </table>	ACT/LINK		SPEED		LED	Definition	LED	Definition	Light Off	No Link	Solid Orange	2.5G	Solid Yellow	Connection	Solid Green	1G/100M	Flashing	Activity	Light Off
ACT/LINK		SPEED																		
LED	Definition	LED	Definition																	
Light Off	No Link	Solid Orange	2.5G																	
Solid Yellow	Connection	Solid Green	1G/100M																	
Flashing	Activity	Light Off	10M																	
LED Indicator	1G LAN Port (i219-LM)																			
	<table border="1"> <thead> <tr> <th colspan="2">ACT/LINK</th> <th colspan="2">SPEED</th> </tr> <tr> <th>LED</th> <th>Definition</th> <th>LED</th> <th>Definition</th> </tr> </thead> <tbody> <tr> <td>Light Off</td> <td>No Link</td> <td>Solid Orange</td> <td>1G</td> </tr> <tr> <td>Solid Yellow</td> <td>Connection</td> <td>Solid Green</td> <td>100M</td> </tr> <tr> <td>Flashing</td> <td>Activity</td> <td>Light Off</td> <td>10M</td> </tr> </tbody> </table>	ACT/LINK		SPEED		LED	Definition	LED	Definition	Light Off	No Link	Solid Orange	1G	Solid Yellow	Connection	Solid Green	100M	Flashing	Activity	Light Off
ACT/LINK		SPEED																		
LED	Definition	LED	Definition																	
Light Off	No Link	Solid Orange	1G																	
Solid Yellow	Connection	Solid Green	100M																	
Flashing	Activity	Light Off	10M																	
Power Requirement																				
DC Input	Typical 12Vdc (+12V~+24V)																			
DC Input Connector	Lockable DC Jack																			
ACPI	Single power ATX Support S0, S3, S4, S5 ACPI 5.0 Compliant																			
Power Mode	AT/ATX (ATX is default setting)																			
Adapter	AC to DC Adapter (12V/60W)																			
Mechanical & Environment																				
Operating Temp.	With wide-temp storage: 0°C ~ 50°C (32°F ~ 122°F) with 0.5m/s air flow																			

ACS10-TGU

	With general storage: 0°C ~ 40°C (32°F ~ 104°F) with 0.5m/s air flow
Storage Temp.	-40°C ~ 75°C (-40°F ~ 167°F)
Operating Humidity	40°C @ 95% Relative Humidity, Non-condensing
Dimension (W*L*H)	180mm*120mm*48mm (W*L*H)
Weight	835g
Vibration Test	<p>Random Vibration Operation</p> <ol style="list-style-type: none"> 1 Test PSD : 0.00454G²/Hz , 1.5 Grms 2 System condition : operation mode 3 Test frequency : 5~500 Hz 4 Test axis : X,Y and Z axis 5 Test time : 30 minutes per each axis 6 IEC60068-2-64 Test Fh 6 Storage : M.2 <p>Sine Vibration test (Non-operation)</p> <ol style="list-style-type: none"> 1 Test Acceleration : 2G 2 Test frequency : 5~500 Hz 3 Sweep : 1 Oct/ per one minute. (logarithmic) 4 Test Axis : X,Y and Z axis 5 Test time :30 min. each axis 6 System condition : Non-Operating mode 7. Reference IEC 60068-2-6 Testing procedures <p>Package Vibration Test:</p> <ol style="list-style-type: none"> 1 Test PSD : 0.026G²/Hz , 2.16 Grms 2 Test frequency : 5~500 Hz 3 Test axis : X,Y and Z axis 4 Test time : 30 minutes per each axis 5 IEC 60068-2-64 Test Fh
Shock Test	<ol style="list-style-type: none"> 1 Wave form : Half Sine wave 2 Acceleration Rate : 50G 3 Duration Time : 11ms 4 No. of shock : 3 times 5 Test Axis : +/- X, +/-Y, +/-Z axis 6 operation mode 7 Reference IEC 60068-2-27 testing procedures <p>Test Eb : M.2 Shock Test</p>
Drop Test	<p>Package drop test</p> <p>Reference ISTA 2A, Method : IEC-60068-2-32 Test:Ed</p> <p>Test Ea : Drop Test</p>


	<p>1 Test phase : One corner, three edges, six faces</p> <p>2 Test high : 96.5cm</p> <p>3 Package weight : 5Kg</p> <p>4 Test drawing</p>
Mounting Kit	<p>Wall Mount Kit (Default)</p> <p>VESA</p>
Software Support	
OS Information	Win11 64bits, Win10, Linux
Certification	
Certification Information	CE, FCC Class A, UKCA
In-Box Accessory	
Accessory	<p>1 x ACS10-TGU</p> <p>1 x AC to DC Adapter (12V/60W)</p> <p>1 x Wall Mount</p> <p>1 x A bag of gadgets (screws, 4 x rubber foots)</p>



Note: Specifications are subject to change without notice.

1.4 System Overview


1.4.1 Front View

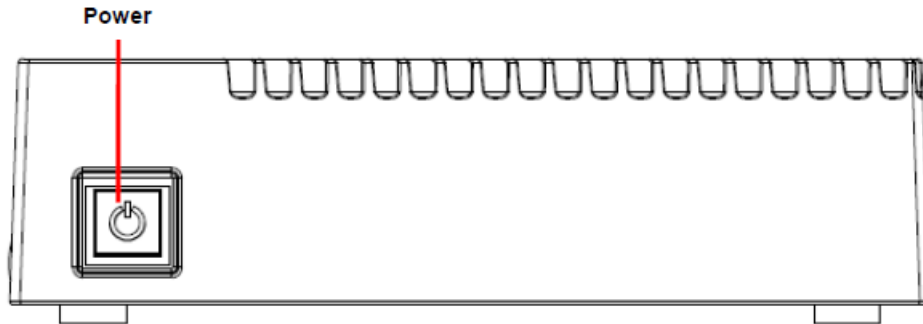

Connectors

Label	Function	Note
Power	Power on button	

1.4.2 Rear View

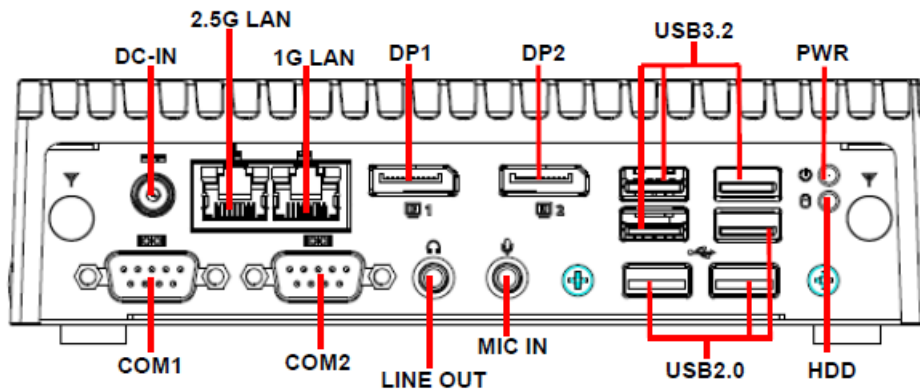


Connectors

Label	Function	Note
HDD	HDD indicator	
PWR	System power indicator	
1G LAN	RJ-45 Ethernet	
2.5G LAN	RJ-45 Ethernet	
USB3.2	USB 3.2 connector x 3	
USB2.0	USB 2.0 connector x 3	
DC-IN	Lockable DC Jack	

DP1/2	DP connector x 2	
MIC IN	Mic-in audio jack	
LINE OUT	Line-out audio jack	
COM1/2	Serial port 1/2 connector	DB-9 male connector

1.5 System Dimensions

1.5.1 Front & Top View

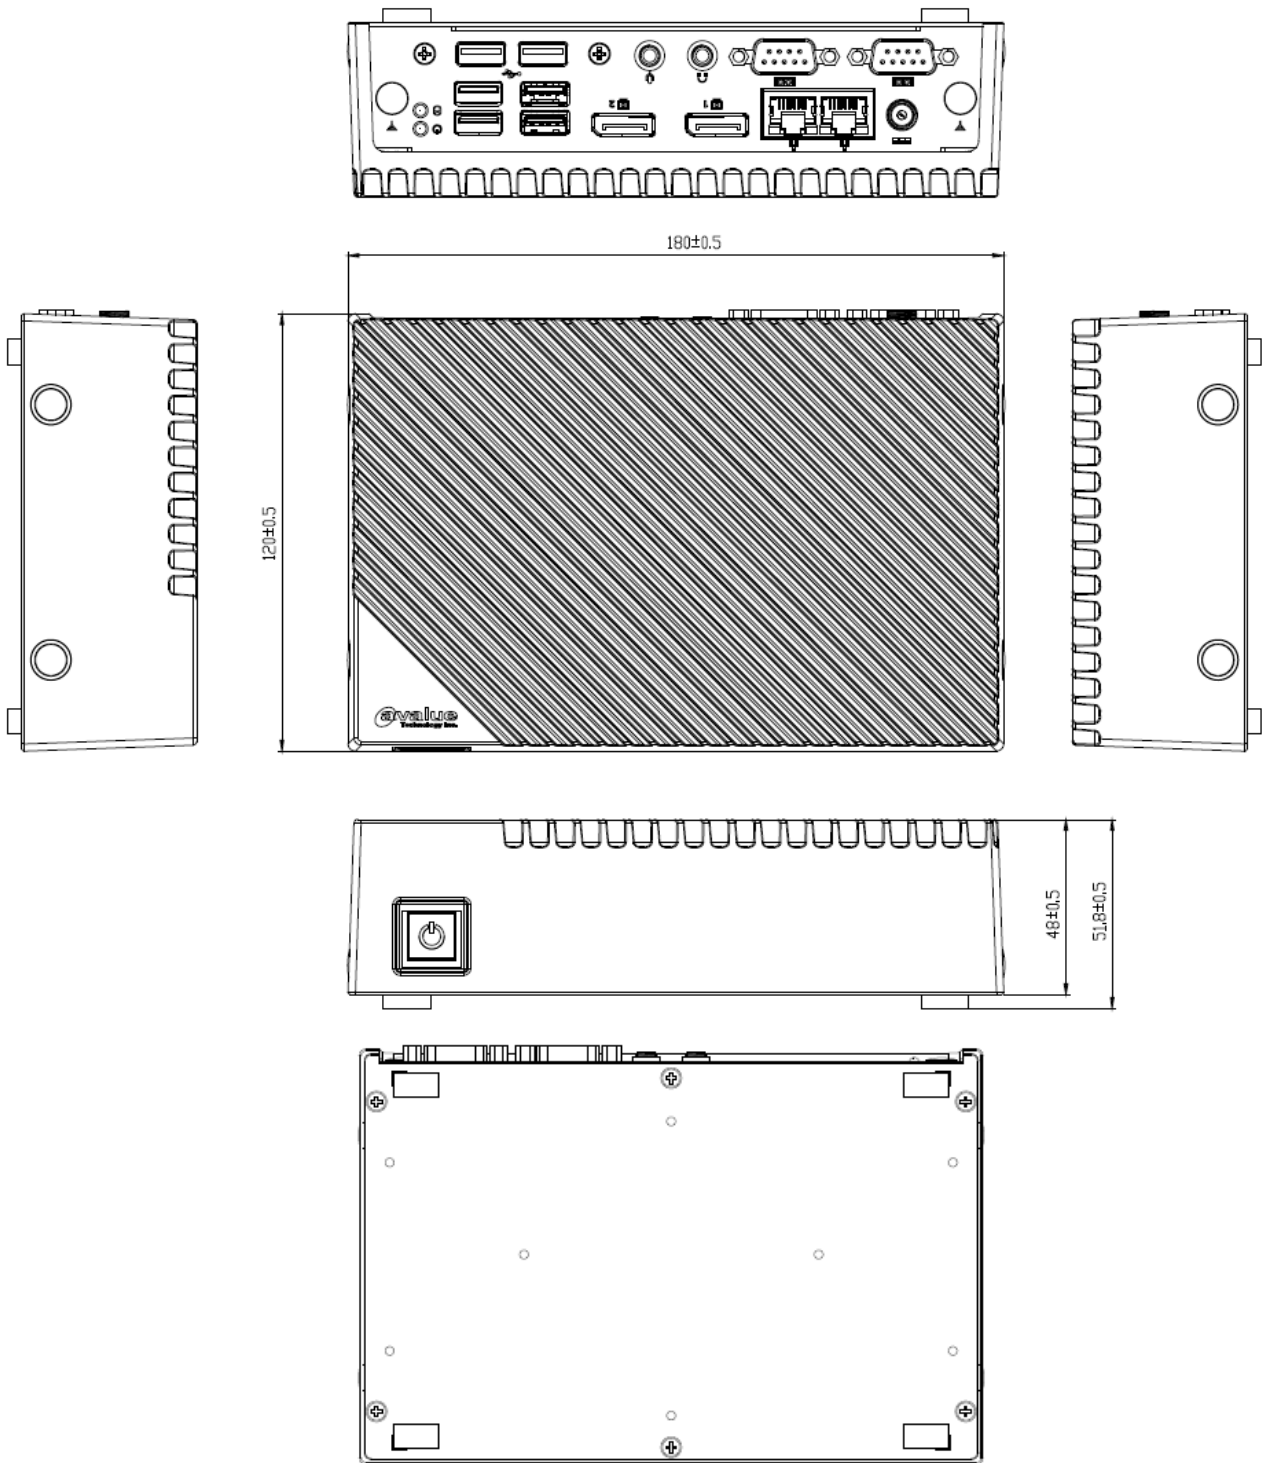

(Unit: mm)

2. Hardware Configuration

For advanced information, please refer to:

- 1- ECM-TGUC included in this manual.




Note: If you need more information, please visit our website:

<http://www.avalue.com.tw>


2.1 ACS10-TGU connector mapping

2.1.1 Serial port 1 connector (COM1)

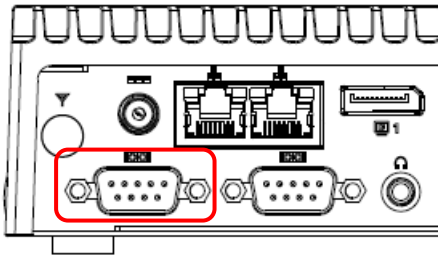

Note:

Default setting RS-232, changing COM cable & OEM BIOS is required for RS-422/RS-485.

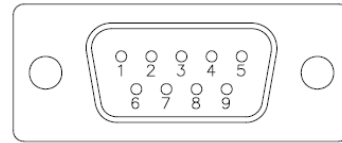

RS-232

Signal	PIN	PIN	Signal
NDCD#	1	6	NDSR#
NRXD	2	7	NRTS#
NTXD	3	8	NCTS#
NDTR#	4	9	NRI#
GND	5		



RS-422

Signal	PIN	PIN	Signal
TxD-	1	6	NC
TxD+	2	7	NC
RxD+	3	8	NC
RxD-	4	9	NC
GND	5		

RS-485

Signal	PIN	PIN	Signal
DATA-	1	6	NC
DATA+	2	7	NC
NC	3	8	NC
NC	4	9	NC
GND	5		


2.1.2 Serial port 2 connector (COM2)

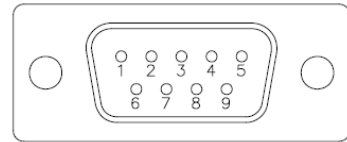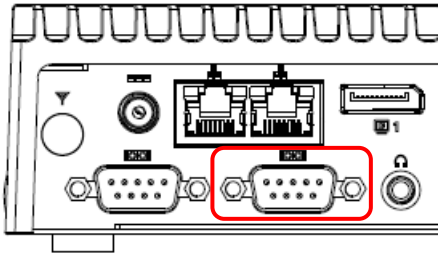

RS-232

Signal	PIN	PIN	Signal
NDCD#	1	6	NDSR#
NRXD	2	7	NRTS#
NTXD	3	8	NCTS#
NDTR#	4	9	NRI#
GND	5		

2.2 ECM-TGUC Overview

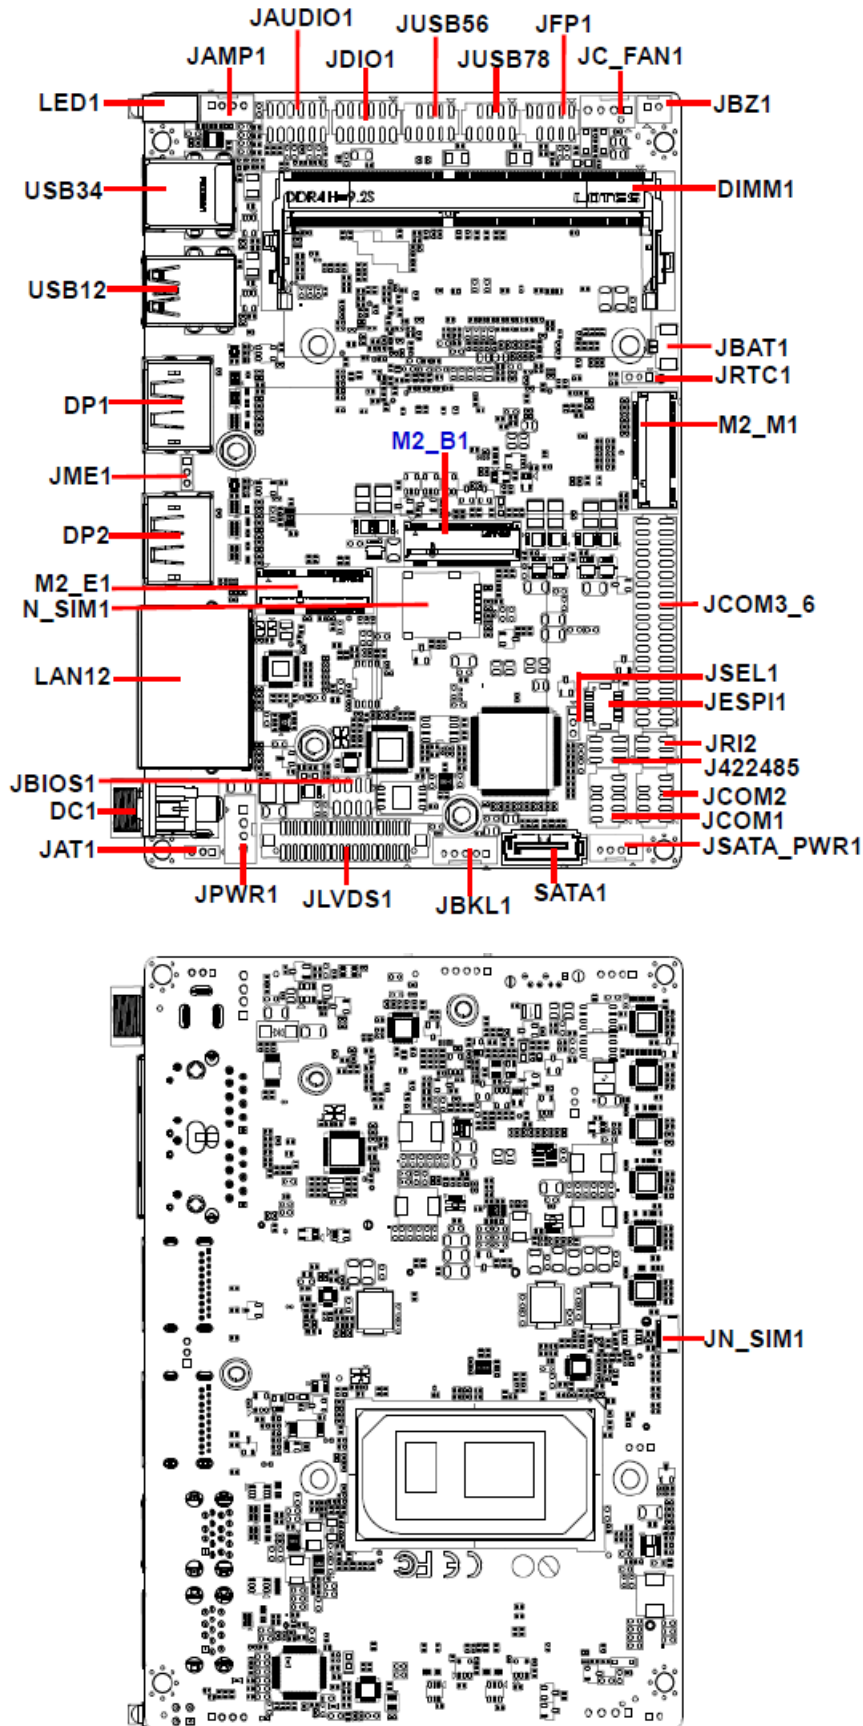

2.3 ECM-TGUC Jumper and Connector List

Jumpers

Label	Function	Note
JRI2	Serial port 2 pin9 signal select	3 x 2 header, pitch 2.00mm
JAT1	AT/ATX Input power select	3 x 1 header, pitch 2.00mm
JRTC1	Clear CMOS	3 x 1 header, pitch 2.00mm
JME1	Flash Descriptor Security Override	3 x 1 header, pitch 2.00mm
JSEL1	M.2 Key B power level select	3 x 1 header, pitch 2.00mm

Connectors


Label	Function	Note
JBKL1	LCD inverter backlight connector	5 x 1 wafer, pitch 2.00mm Matching Connector: JST PHR-5
JC_FAN1	CPU fan connector	4 x 1 wafer, pitch 2.54mm
JCOM1	Serial port 1 connector	5 x 2 header, pitch 2.00mm
JCOM2	Serial port 2 connector	5 x 2 header, pitch 2.00mm
JCOM3_6	Serial port 3-6 connector	20 x 2 header, pitch 2.00mm
J422485	Serial port 1 in RS-422/485 mode	3 x 2 header, pitch 2.00mm
JDIO1	General purpose I/O connector	6 x 2 header, pitch 2.00mm
M2_M1	M.2 KEY-M 2280 connector	
M2_E1	M.2 KEY-E 2230 connector	
M2_B1	M.2 KEY-B 3042/3052/2242 connector	
LED1	HDD/Power LED indicator	
JLVDS1	LVDS connector	DIN 40-pin wafer, pitch 1.25mm Matching Connector: Hirose DF13-40DS-1.25C
JFP1	Front Panel connector	5 x 2 header, pitch 2.00mm
USB12	2 x USB3.2 connector	
USB34	1 x USB2.0 connector 1 x USB3.2 connector	
JUSB56	USB2.0 connector	5 x 2 header, pitch 2.00mm
JUSB78	USB2.0 connector	5 x 2 header, pitch 2.00mm
JBZ1	PC Buzzer connector	2 x 1 wafer, pitch 2.00mm
LAN1/2	RJ-45 Ethernet 1/2	
JBAT1	Battery connector	2 x 1 wafer, pitch 1.25mm

ACS10-TGU


JPWR1	Power connector	4 x 1 wafer, pitch 2.00mm
JBIOS1	BIOS connector	4 x 2 header, pitch 2.00mm
JSATA_PWR1	SATA Power connector	4 x 1 wafer, pitch 2.00mm
SATA1	Serial ATA connector	
DP1/2	2 x DP connector	
DIMM1	DDR4 SODIMM socket	
JESPI1	eSPI debug connector	6 x 2 wafer, pitch 1.00mm
JAUDIO1	Audio connector	6 x 2 header, pitch 2.00mm
N_SIM1	SIM card slot	
JAMP1	Amp connector	4 x 1 wafer, pitch 2.00mm
DC1	DC Jack lockable connector	
JN_SIM1	SIM card slot	10 x 1 FPC, pitch 0.50 mm

2.4 ECM-TGUC Jumpers and Connectors settings


2.4.1 Serial port 2 pin9 signal select (JRI2)

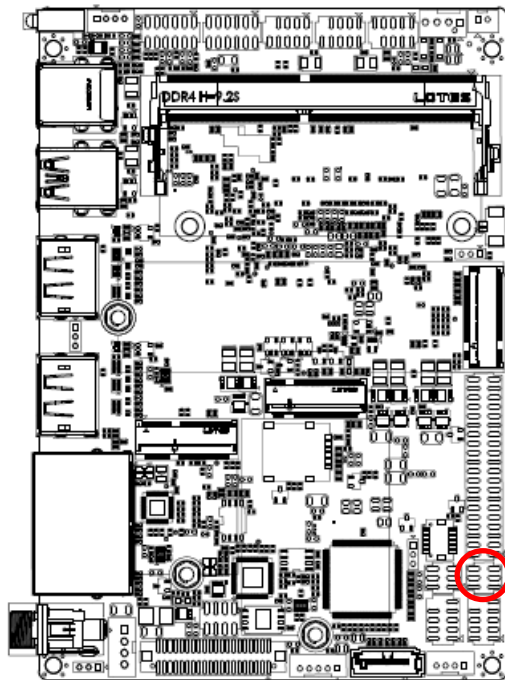


Ring*

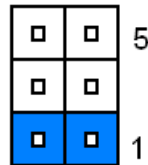

+12V

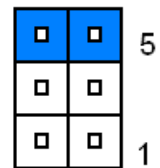


+5V

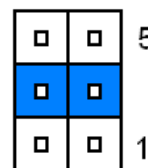


* Default


2.4.2 Clear CMOS (JRTC1)

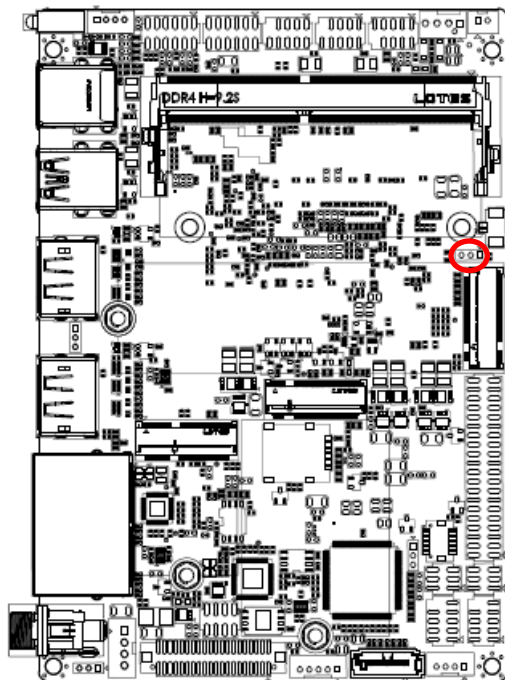

Normal*





Clear CMOS





* Default

2.4.3 AT/ATX Input power select (JAT1)

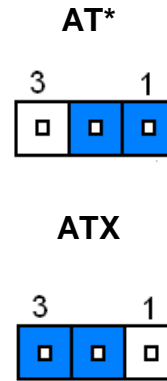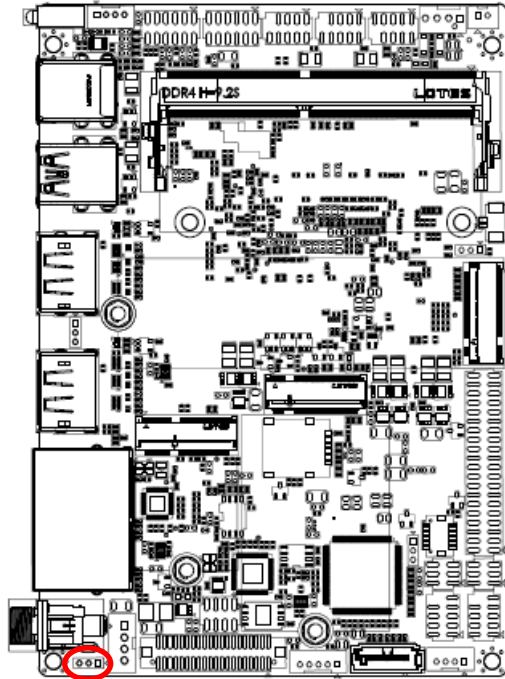


* Default

2.4.4 Flash Descriptor Security Override (JME1)

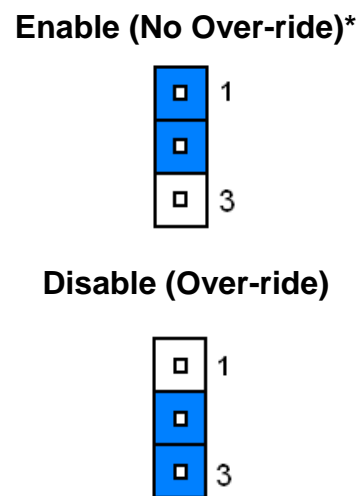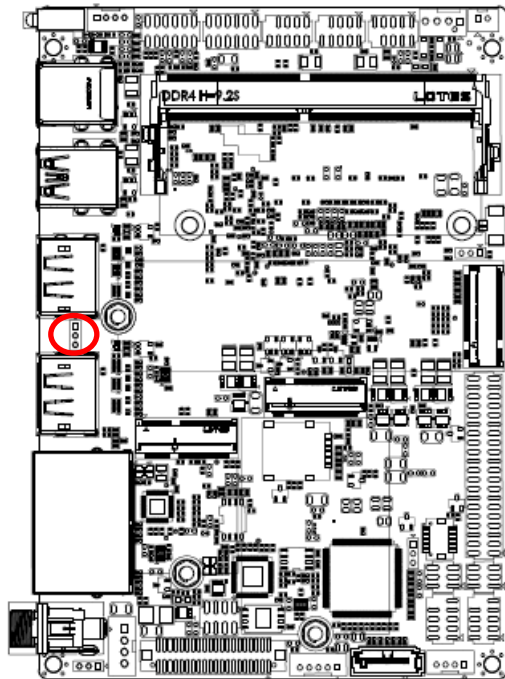


* Default


2.4.5 M.2 Key B power level select (JSEL1)

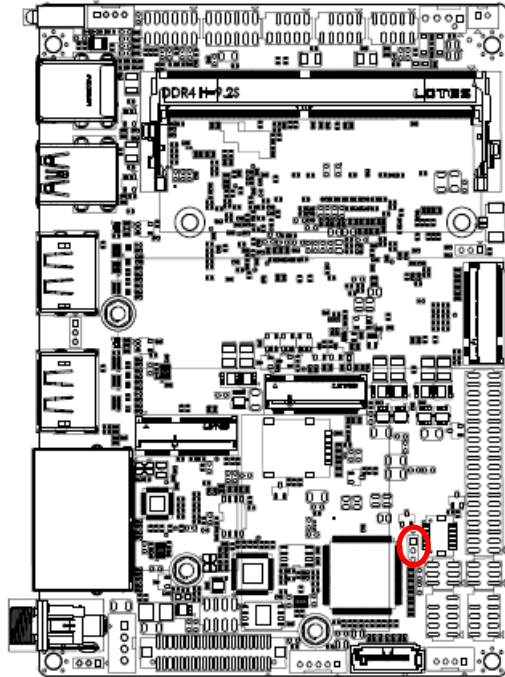

3.3V*




3.8V



* Default



2.4.6 LCD inverter connector (JBKL1)

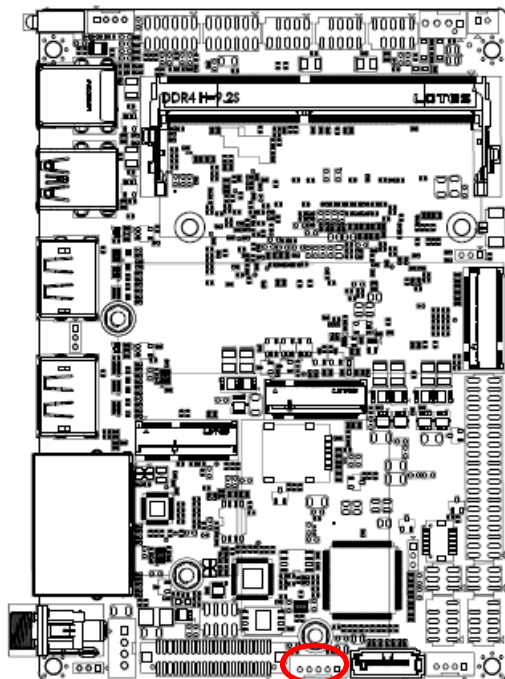

Signal	PIN
+12V	1
GND	2
BKLEN	3
VBRIGHT	4
+5V	5



ACS10-TGU

2.4.7 Serial port 1 connector (JCOM1)

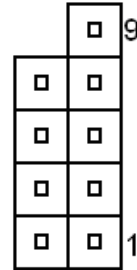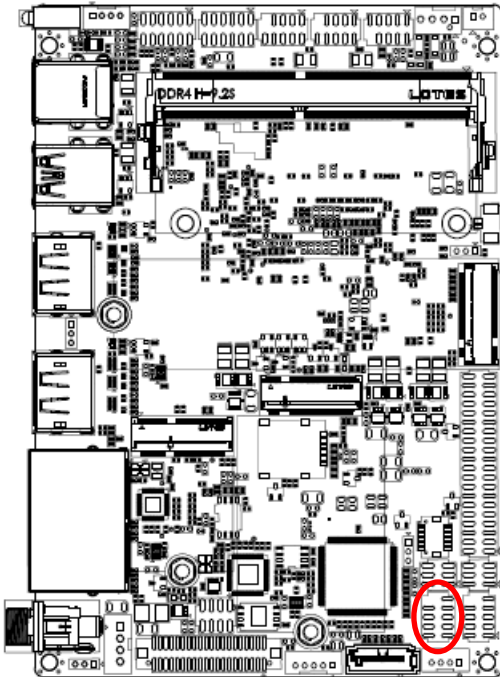



Signal	PIN	PIN	Signal
		9	COM_RI#_1
COM_CTS#_1	8	7	COM_RTS#_1
COM_DSR#_1	6	5	GND
COM_DTR#_1	4	3	COM_TXD_1
COM_RXD_1	2	1	COM_DCD#_1

2.4.8 Serial port 2 connector (JCOM2)

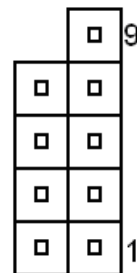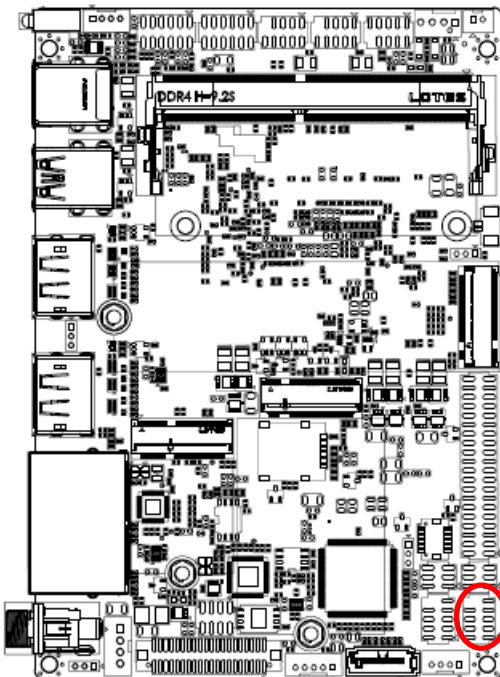



Signal	PIN	PIN	Signal
		9	+V12S_COM_RI#_2
COM_CTS#_2	8	7	COM_RTS#_2
COM_DSR#_2	6	5	GND
COM_DTR#_2	4	3	COM_TXD_2
COM_RXD_2	2	1	COM_DCD#_2

2.4.9 Serial port 3-6 connector (JCOM3_6)

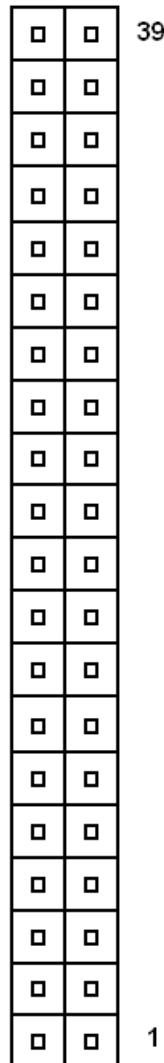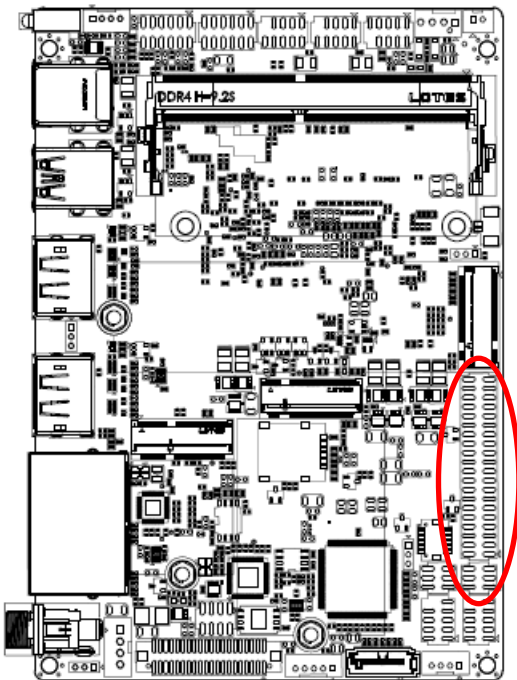



Signal	PIN	PIN	Signal
NC	40	39	COM_RI#_6
COM_CTS#_6	38	37	COM_RTS#_6
COM_DSR#_6	36	35	GND
COM_DTR#_6	34	33	COM_TXD_6
COM_RXD_6	32	31	COM_DCD#_6
NC	30	29	COM_RI#_5
COM_CTS#_5	28	27	COM_RTS#_5
COM_DSR#_5	26	25	GND
COM_DTR#_5	24	23	COM_TXD_5
COM_RXD_5	22	21	COM_DCD#_5
NC	20	19	COM_RI#_4
COM_CTS#_4	18	17	COM_RTS#_4
COM_DSR#_4	16	15	GND
COM_DTR#_4	14	13	COM_TXD_4
COM_RXD_4	12	11	COM_DCD#_4
NC	10	9	COM_RI#_3
COM_CTS#_3	8	7	COM_RTS#_3
COM_DSR#_3	6	5	GND
COM_DTR#_3	4	3	COM_TXD_3
COM_RXD_3	2	1	COM_DCD#_3

2.4.10 Serial port 1 in RS-422/485 mode (J422485)

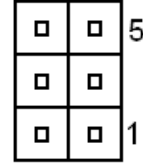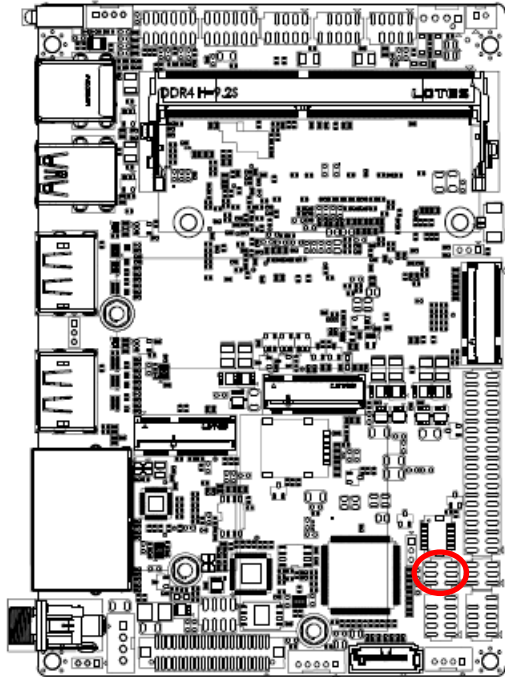



Signal	PIN	PIN	Signal
GND	6	5	+V5S_422485
422_RXDN	4	3	422_RXDP
485-422_TXDP	2	1	485-422_TXDN

2.4.11 CPU fan connector (JC_FAN1)

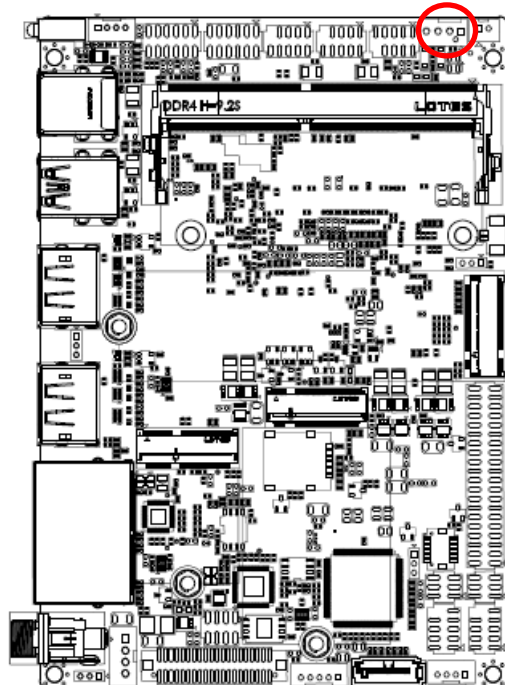



Signal	PIN
GND	1
+12V	2
CPUFAN_IN	3
CPUFAN_OUT	4

2.4.12 General purpose I/O connector (JDIO1)

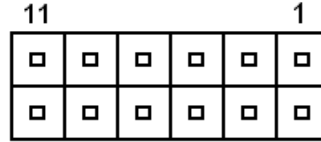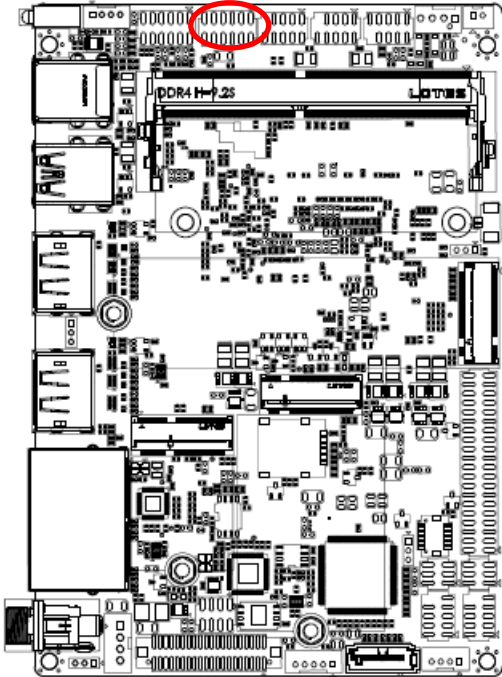


Signal	PIN	PIN	Signal
DIO_GP20	1	2	DIO_GP10
DIO_GP21	3	4	DIO_GP11
DIO_GP22	5	6	DIO_GP12
DIO_GP23	7	8	DIO_GP13
SMB_SCL_S0	9	10	SMB_SDA_S0
GND	11	12	+5V

2.4.13 SATA Power connector (JSATA_PWR1)

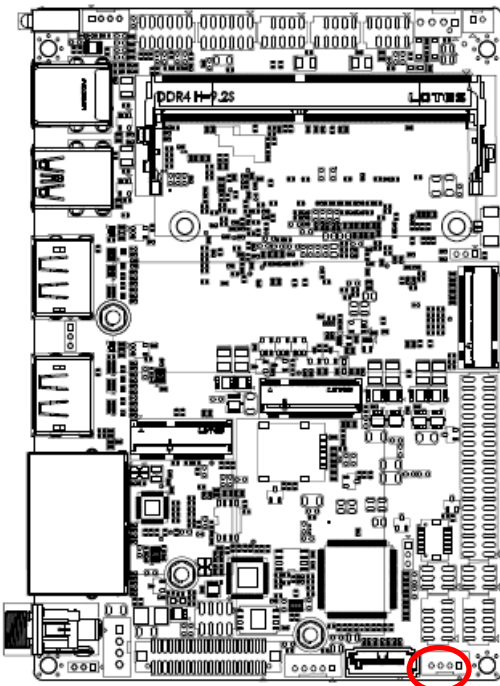


Signal	PIN
+5V	1
GND	2
GND	3
+12V	4

2.4.14 Battery connector (JBAT1)

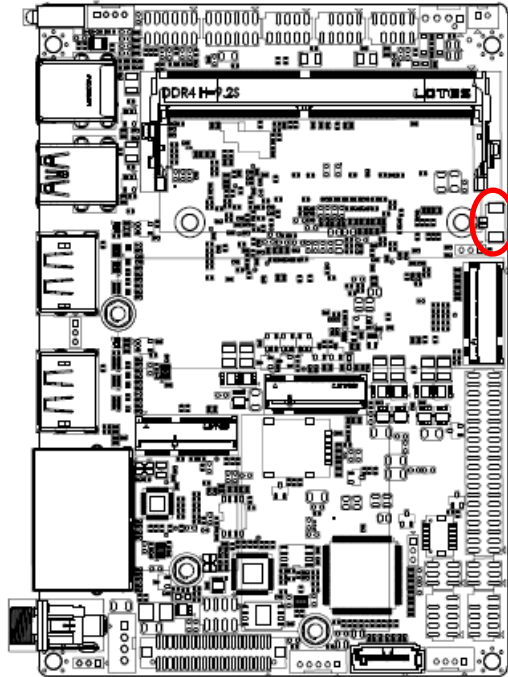



Signal	PIN
GND	2
+RTCBAT	1

2.4.15 Power connector (JPWR1)

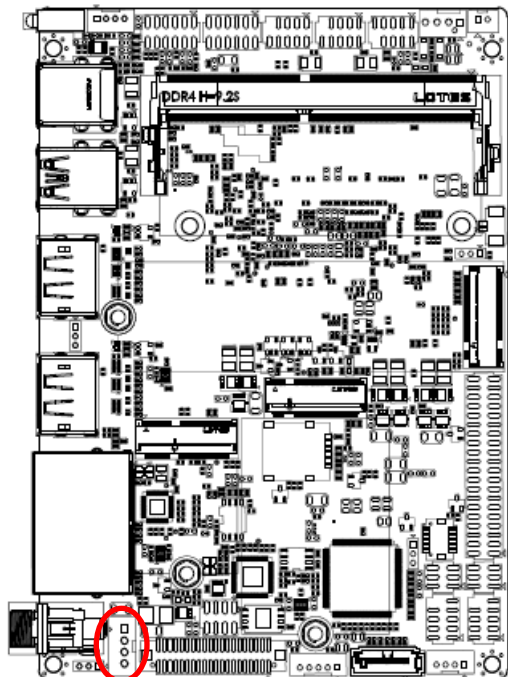



Signal	PIN
+24VSB	1
+24VSB	2
GND	3
GND	4

2.4.16 LVDS connector (JLVDS1)

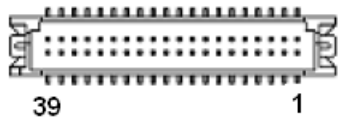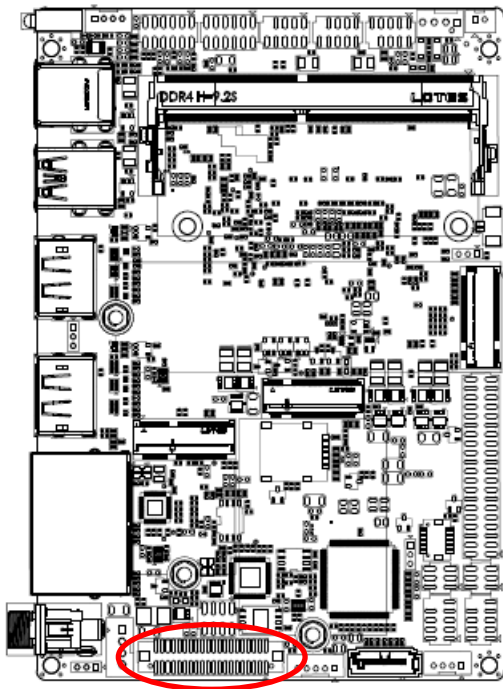



Signal	PIN	PIN	Signal
+3.3V	1	2	+5V
+3.3V	3	4	+5V
+3.3V	5	6	+5V
GND	7	8	GND
LVDS_A_DATA_P_1/ eDP_TX1P	9	10	LVDS_A_DATA_P_0/ eDP_HPDP
LVDS_A_DATA_N_1/ eDP_TX1N	11	12	LVDS_A_DATA_N_0
GND	13	14	GND
LVDS_A_DATA_P_3	15	16	LVDS_A_DATA_P_2/ eDP_TX0P
LVDS_A_DATA_N_3	17	18	LVDS_A_DATA_N_2/ eDP_TX0N
GND	19	20	GND
LVDS_B_DATA_P_1	21	22	LVDS_B_DATA_P_0
LVDS_B_DATA_N_1	23	24	LVDS_B_DATA_N_0
GND	25	26	GND
LVDS_B_DATA_P_3	27	28	LVDS_B_DATA_P_2
LVDS_B_DATA_N_3	29	30	LVDS_B_DATA_N_2
GND	31	32	GND
LVDS_B_CLK_P	33	34	LVDS_A_CLK_P/ eDP_AUXP
LVDS_B_CLK_N	35	36	LVDS_A_CLK_N/ eDP_AUXN
GND	37	38	GND
+12V	39	40	+12V

2.4.17 USB2.0 connector (JUSB56)

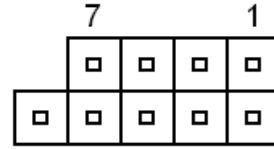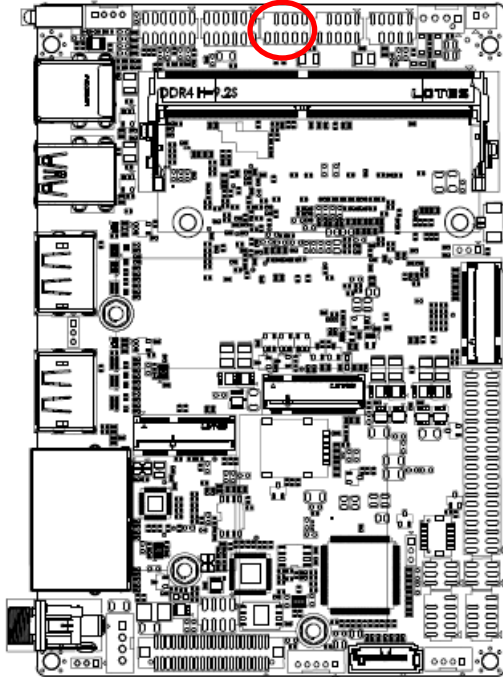



Signal	PIN	PIN	Signal
+5VSB	1	2	+5VSB
USB_R_DN5	3	4	USB_R_DN6
USB_R_DP5	5	6	USB_R_DP6
GND	7	8	GND
		10	GND

2.4.18 USB2.0 connector (JUSB78)

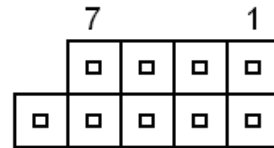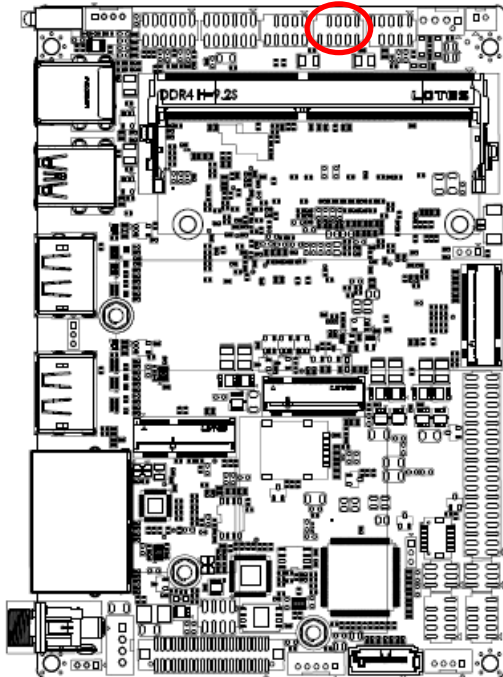


Signal	PIN	PIN	Signal
+5VSB	1	2	+5VSB
USB_R_DN7	3	4	USB_R_DN8
USB_R_DP7	5	6	USB_R_DP8
GND	7	8	GND
		10	GND

2.4.19 Front Panel connector (JFP1)

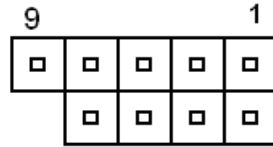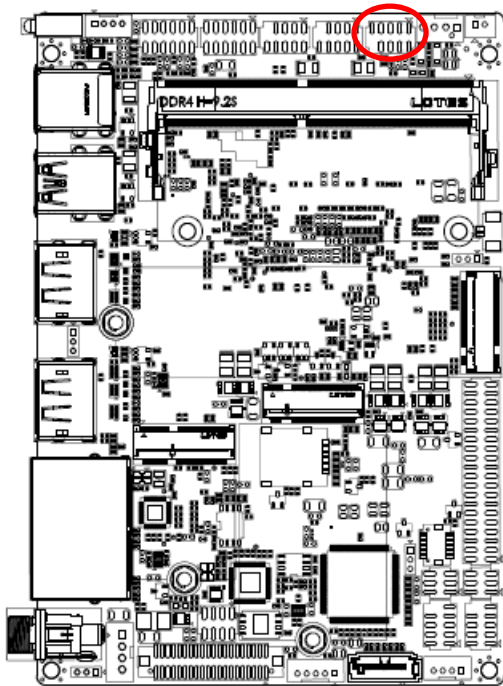

Signal	PIN	PIN	Signal
HDD_LED_P	1	2	PWR_LED_P
HDD_LED#	3	4	PWR_LED#
PM_SYSRST#	5	6	PWRBTN_IN#
GND	7	8	GND
NC	9		



2.4.20 PC Buzzer connector (JBZ1)

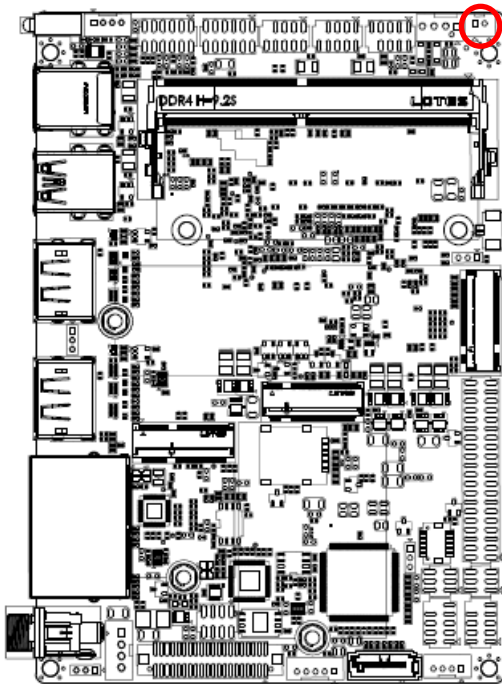

Signal	PIN
SOC_SPKR_R	1
+5V	2



ACS10-TGU

2.4.21 AMP connector (JAMP1)

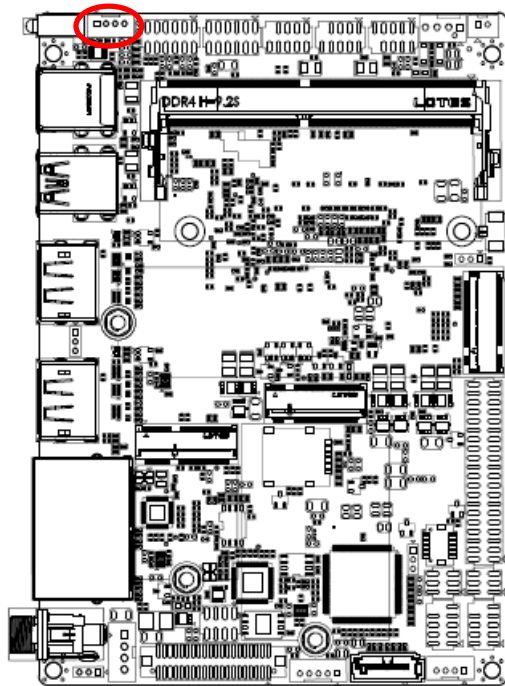



Signal	PIN
AMP_LOUT+	1
AMP_LOUT-	2
AMP_ROUT+	3
AMP_ROUT-	4

2.4.22 BIOS connector (JBIOS1)

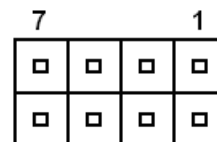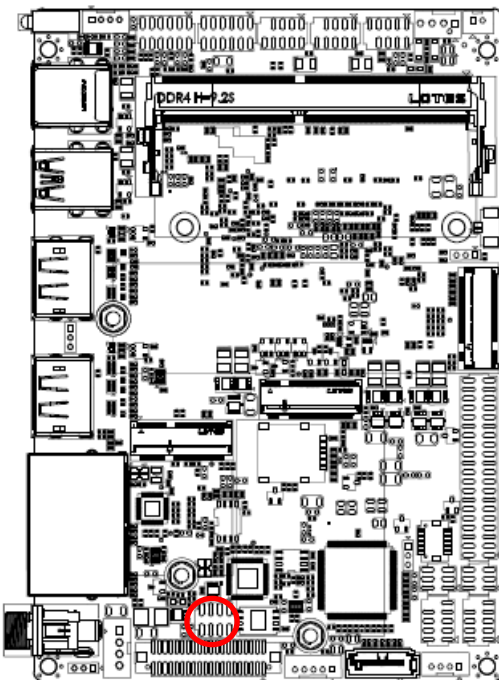



Signal	PIN	PIN	Signal
+V3.3A_SPI	1	2	GND
SPI_CS0#_ROM	3	4	SPI_CLK_ROM
SPI_MISO_ROM	5	6	SPI_MOSI_ROM
SPI_HOLD#_ROM	7	8	SPI_WP#_ROM

2.4.23 eSPI debug connector (JESPI1)

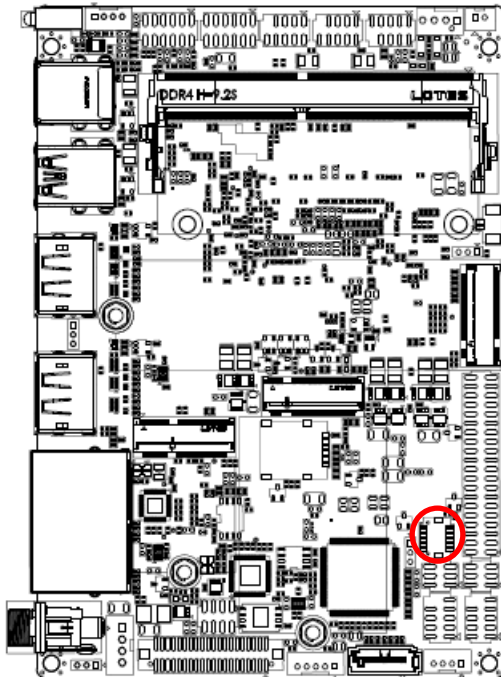

Signal	PIN	PIN	Signal
eSPI_R_IO0	1	2	+3.3V
eSPI_R_IO1	3	4	PCH_PLT_RST#
eSPI_R_IO2	5	6	eSPI_R_CS#
eSPI_R_IO3	7	8	eSPI_R_CLK
NC	9	10	GND
eSPI_R_RST#	11	12	NC

2.4.24 Audio connector (JAUDIO1)

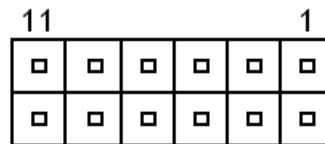
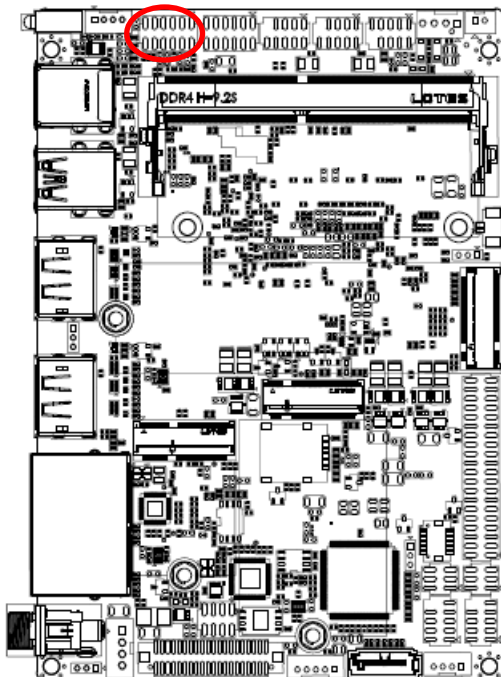


Signal	PIN	PIN	Signal
FRONT-R-OUT	1	2	FRONT-L-OUT
HD_AGND	3	4	HD_AGND
LINE1-R-IN	5	6	LINE1-L-IN
MIC1-R-IN	7	8	MIC1-L-IN
FRONT-JD	9	10	LINE1-JD
MIC1-JD	11	12	HD_AGND

2.4.24.1 Signal Description – Audio connector (JAUDIO1)



Signal	Signal Description
LINE1-JD	AUDIO IN (LINE_RIN/LIN)sense pin
FRONT-JD	AUDIO Out(ROUT/LOUT) sense pin
MIC1-JD	MIC IN (MIC_RIN/LIN) sense pin

2.4.25 SIM card slot (JN_SIM1)

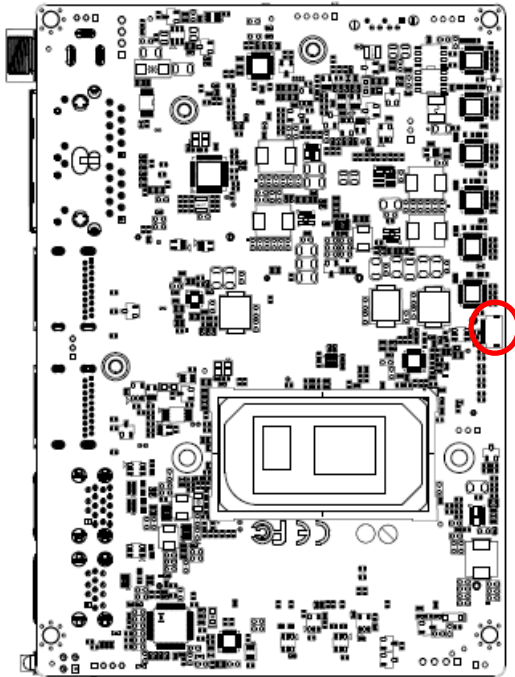

Signal	PIN
NC	10
N_SIM_CD_R	9
GND	8
UIM_DATA_R	7
UIM_CLK_R	6
GND	5
+VPP_SIM_1	4
UIM_RESET#	3
GND	2
+VCC_SIM	1

2.5 Installing Memory, Storage, Wi-Fi card & Wireless module (ACS10-TGU)

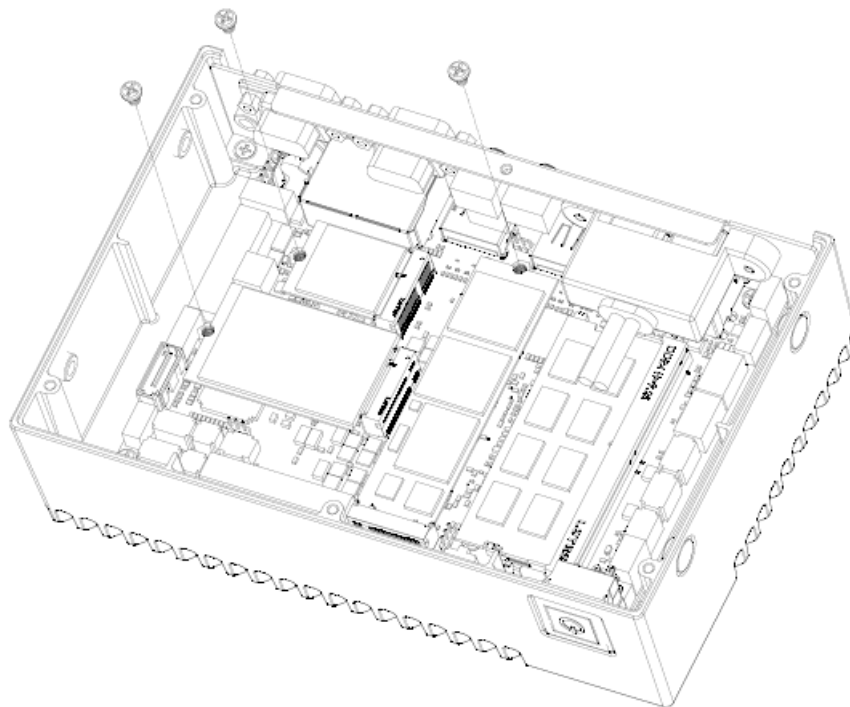
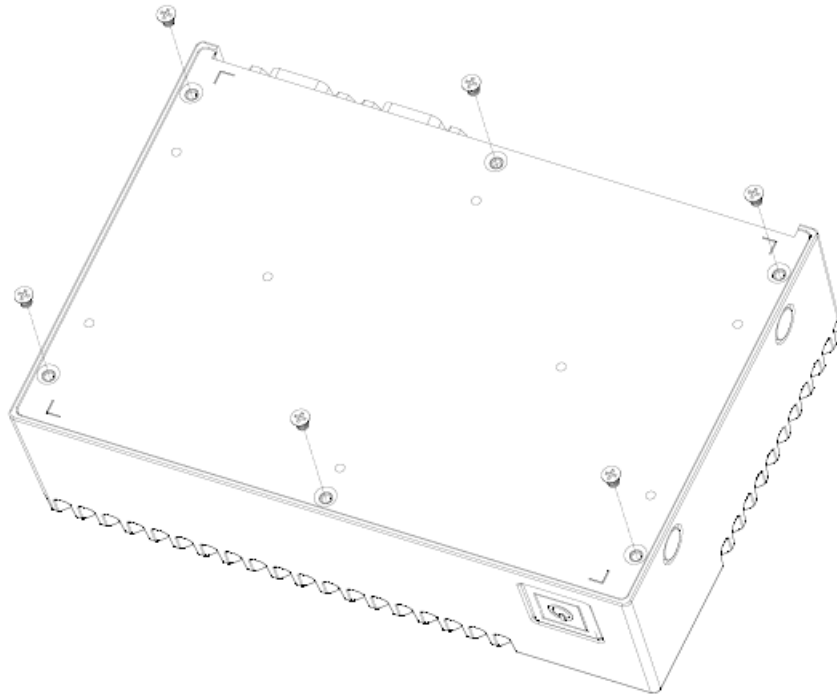


Step1. Remove 6screws from the bottom of system.

Step2. Insert modules into slots (Memory/Storage/Wi-Fi/Wireless)

Step3. Fix Storage, Wi-Fi & Wireless with screws.


2.6 Installing M.2 B-Key card-42 to 52 (ACS10-TGU)

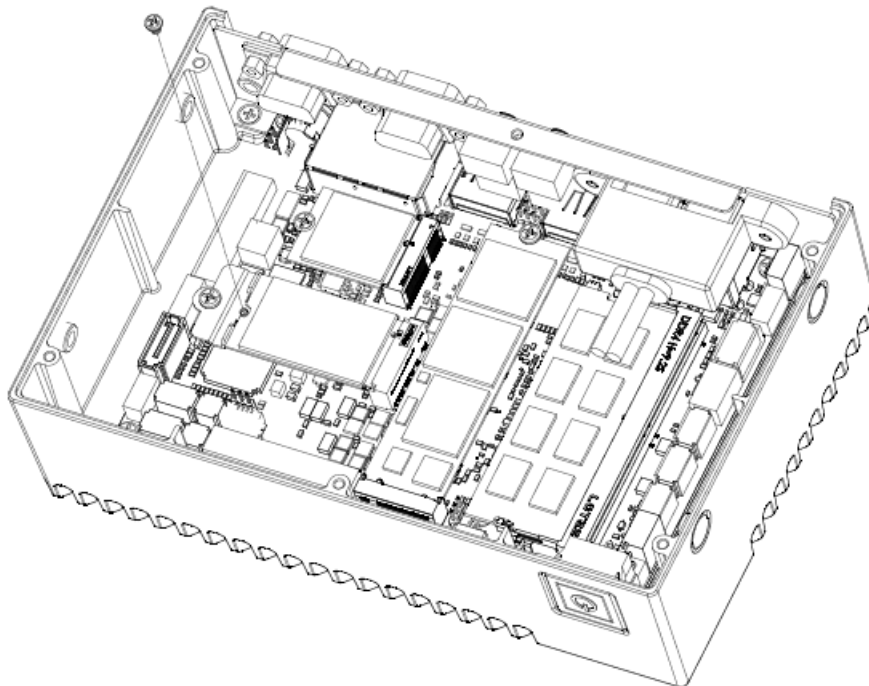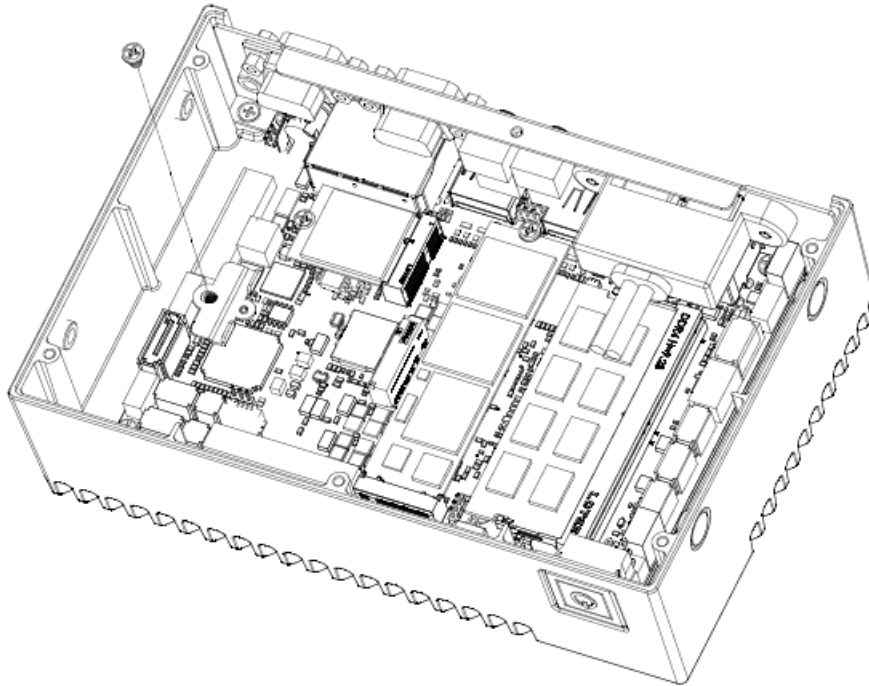

Step1. Fix bracket with screw.


Step2. Insert M.2 B-Key card into designated locations and fasten with screw to complete installation.

2.7 Installing Wall-Mount Brackets (ACS10-TGU)

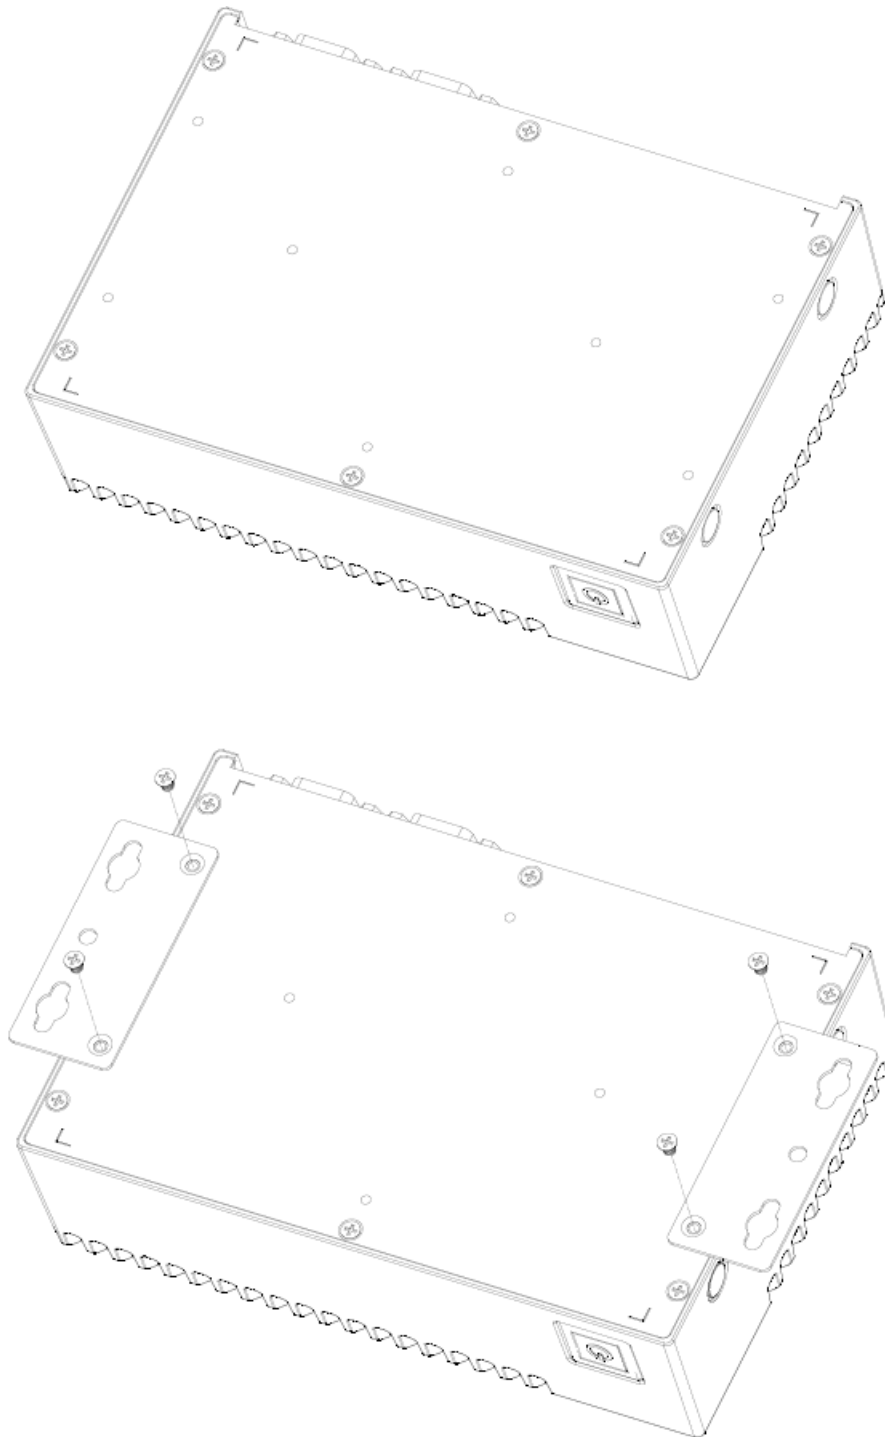


Step1. Fasten 4 screws on each side of the system to secure Mounting brackets.


2.8 Installing VESA Mounting (ACS10-TGU)

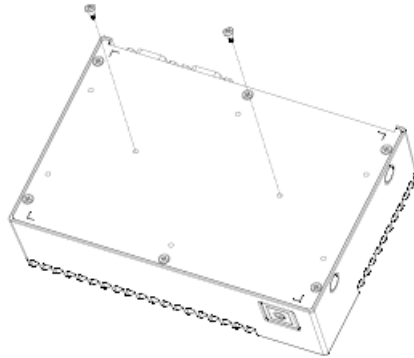

Step1. Insert and fasten two M3*L11.1 screw on the bottom.

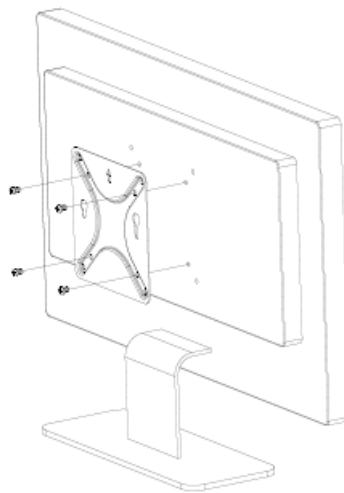

Step2. Fix with four M4*6mm screws on the monitor (or wall).

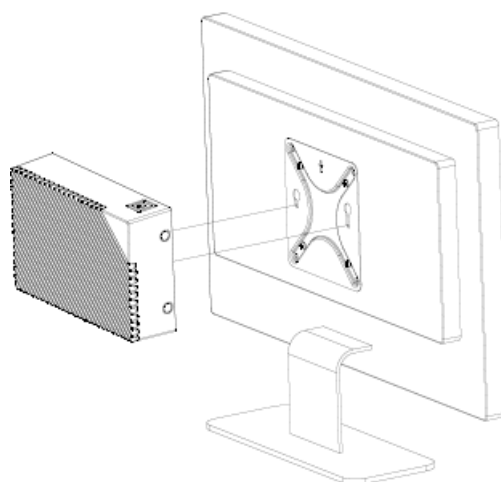

Step3. Slide the system onto the VESA mount bracket.

3. BIOS Setup

3.1 Introduction

The BIOS setup program allows users to modify the basic system configuration. In this following chapter will describe how to access the BIOS setup program and the configuration options that may be changed.

3.2 Starting Setup

AMI BIOS™ is immediately activated when you first power on the computer. The BIOS reads the system information contained in the NVRAM and begins the process of checking out the system and configuring it. When it finishes, the BIOS will seek an operating system on one of the disks and then launch and turn control over to the operating system.

While the BIOS is in control, the Setup program can be activated in one of two ways:

By pressing <ESC> or immediately after switching the system on, or

By pressing the < ESC> or key when the following message appears briefly at the left-top of the screen during the POST (Power On Self Test).

Press <ESC> or to enter SETUP

If the message disappears before you respond and you still wish to enter Setup, restart the system to try again by turning it OFF then ON or pressing the "RESET" button on the system case. You may also restart by simultaneously pressing <Ctrl>, <Alt>, and <Delete> keys.

3.3 Using Setup

In general, you use the arrow keys to highlight items, press <Enter> to select, use the PageUp and PageDown keys to change entries, press <F1> for help and press <Esc> to quit. The following table provides more detail about how to navigate in the Setup program using the keyboard.

Button	Description
↑	Move to previous item
↓	Move to next item
←	Move to the item in the left hand
→	Move to the item in the right hand
Esc key	Main Menu -- Quit and not save changes into NVRAM Status Page Setup Menu and Option Page Setup Menu -- Exit current page and return to Main Menu
+ key	Increase the numeric value or make changes
- key	Decrease the numeric value or make changes
F1 key	General help, only for Status Page Setup Menu and Option Page Setup Menu
F2 key	Previous Values
F3 key	Optimized defaults
F4 key	Save & Exit Setup

- **Navigating Through The Menu Bar**

Use the left and right arrow keys to choose the menu you want to be in.



Note: Some of the navigation keys differ from one screen to another.

- **To Display a Sub Menu**

Use the arrow keys to move the cursor to the sub menu you want. Then press <Enter>. A “➤” pointer marks all sub menus.

3.4 Getting Help

Press F1 to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window press <Esc> or the <Enter> key again.

3.5 In Case of Problems

If, after making and saving system changes with Setup, you discover that your computer no longer is able to boot, the AMI BIOS supports an override to the NVRAM settings which resets your system to its defaults.



The best advice is to only alter settings which you thoroughly understand. To this end, we strongly recommend that you avoid making any changes to the chipset defaults. These defaults have been carefully chosen by both BIOS Vendor and your systems manufacturer to provide the absolute maximum performance and reliability. Even a seemingly small change to the chipset setup has the potential for causing you to use the override.

3.6 BIOS setup

Once you enter the Aptio Setup Utility, the Main Menu will appear on the screen. The Main Menu allows you to select from several setup functions and exit choices. Use the arrow keys to select among the items and press <Enter> to accept and enter the sub-menu.

3.6.1 Main Menu

This section allows you to record some basic hardware configurations in your computer and set the system clock.

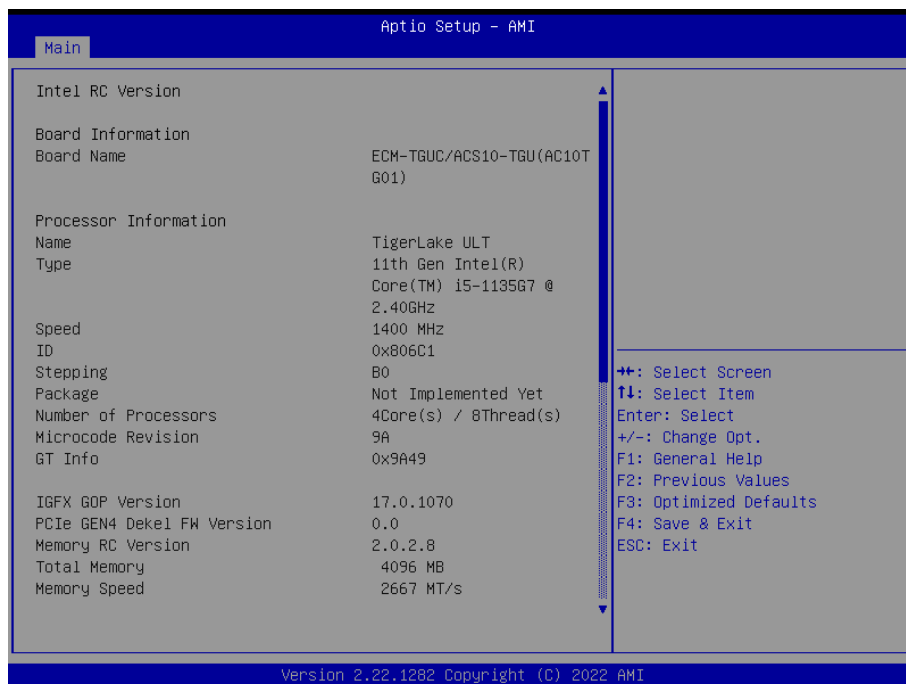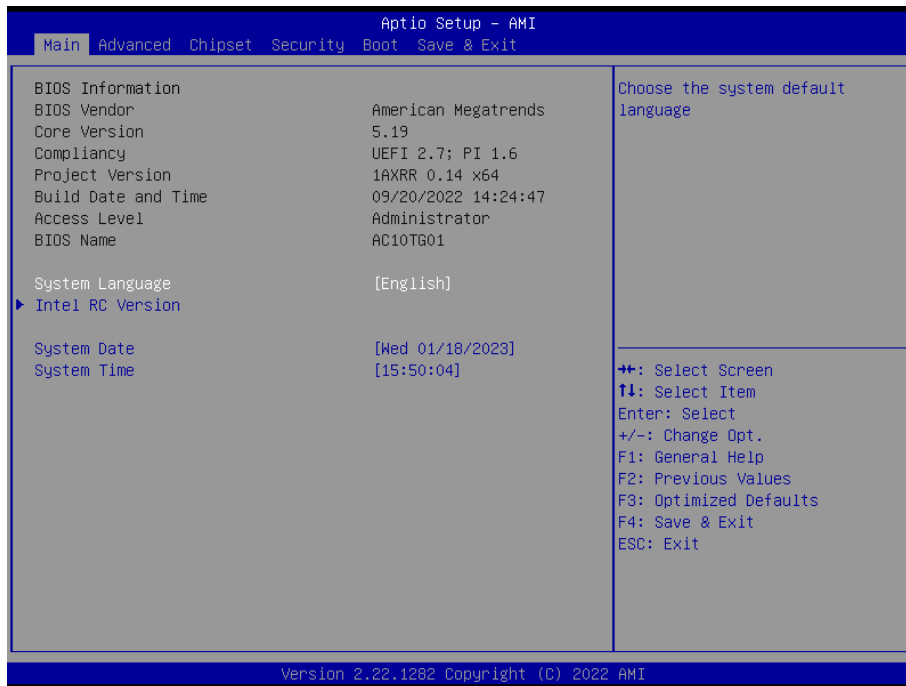

ACS10-TGU

3.6.1.1 System Language

This option allows choosing the system default language.

3.6.1.2 System Date

Use the system date option to set the system date. Manually enter the day, month and year.

3.6.1.3 System Time

Use the system time option to set the system time. Manually enter the hours, minutes and seconds.



Note: The BIOS setup screens shown in this chapter are for reference purposes only, and may not exactly match what you see on your screen.

Visit the Avalue website (www.avalu.com.tw) to download the latest product and BIOS information.


3.6.2 Advanced Menu

This section allows you to configure your CPU and other system devices for basic operation through the following sub-menus.



3.6.2.1 CPU Configuration

Use the CPU configuration menu to view detailed CPU specification and configure the CPU.

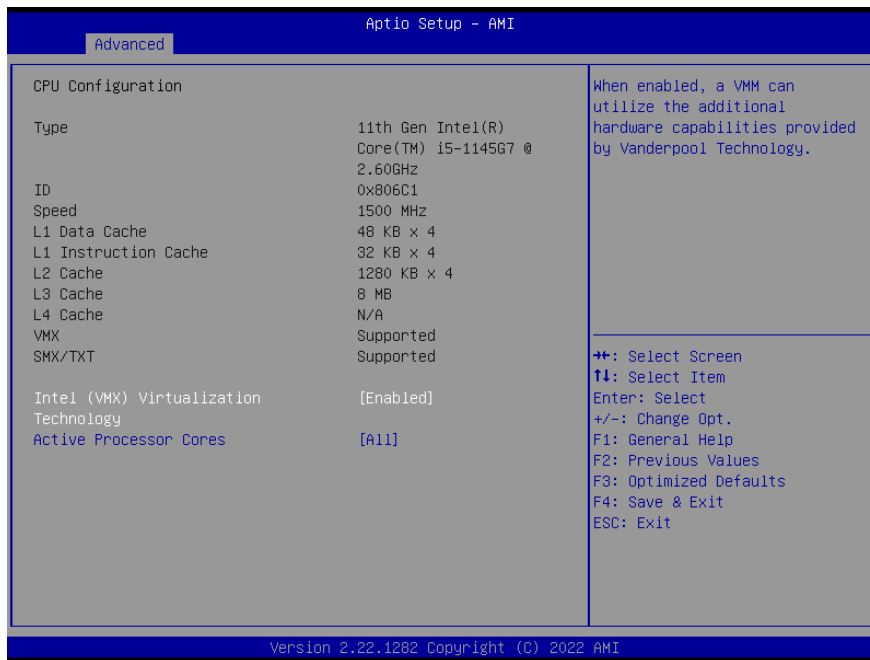


Item	Options	Description
Intel (VMX) Virtualization Technology	Disabled Enabled[Default]	When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.
Active Processor Cores	All[Default] 1 2 3 4 5 6 7 8	Number of cores to enable in each processor package.

3.6.2.2 Power & Performance




3.6.2.2.1 CPU – Power Management Control

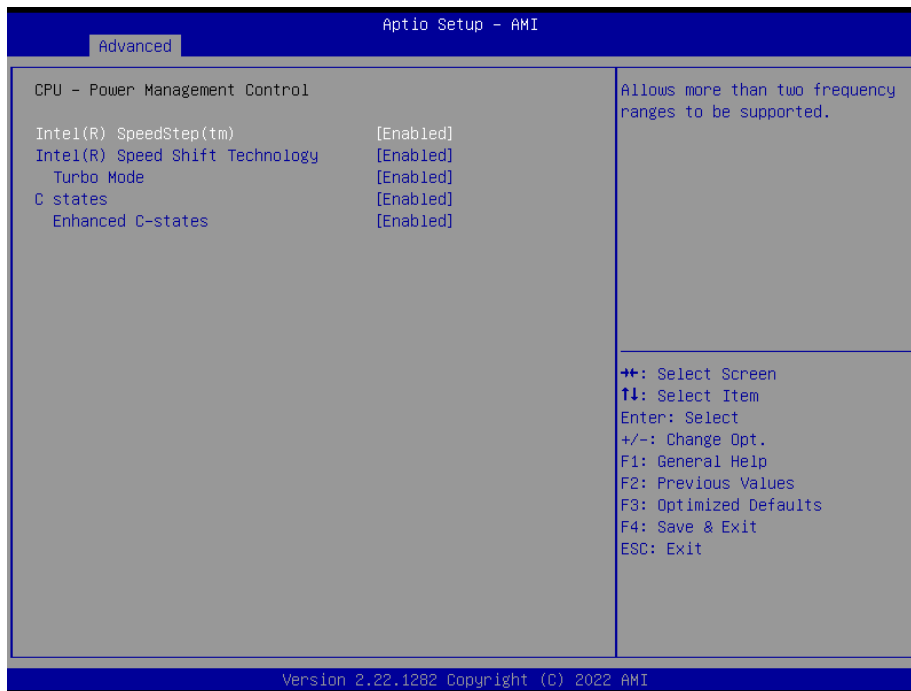

Item	Option	Description
Intel® SpeedStep™	Enabled[Default], Disabled	Allows more than two frequency ranges to be supported.
Intel® Speed Shift Technology	Enabled[Default], Disabled	Enable/Disable Intel® Speed Shift Technology support. Enabling will expose the CPPC v2 interface to allow for hardware controlled P-states.

Turbo Mode	Enabled[Default], Disabled	Enable/Disable processor Turbo Mode (requires Intel Speed Step or Intel Speed Shift to be available and enabled).
C States	Enabled[Default], Disabled	Enable/Disable CPU Power Management.
Enhanced C-States	Enabled[Default], Disabled	Enable/Disable C1E. When enabled, CPU will switch to minimum speed when all cores enter C-State.

3.6.2.3 PCH-FW Configuration

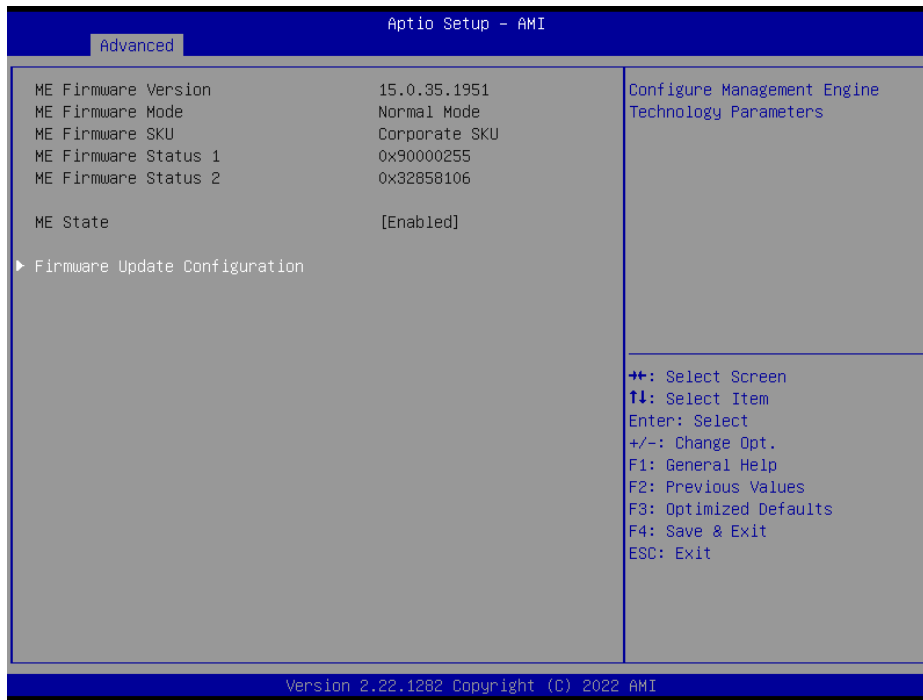

3.6.2.3.1 Firmware Update Configuration



ACS10-TGU


Item	Option	Description
ME FW Image Re-Flash	Disabled[Default], Enabled	Enable/Disable Me FW Image Re-Flash function.

3.6.2.4 Trusted Computing



Item	Options	Description
Security Device Support	Disable, Enable[Default]	Enables or Disables BIOS support for security device. O.S. will not show Security Device. TCG EFI protocol and INT1A interface will not be available.

3.6.2.5 APCI Settings

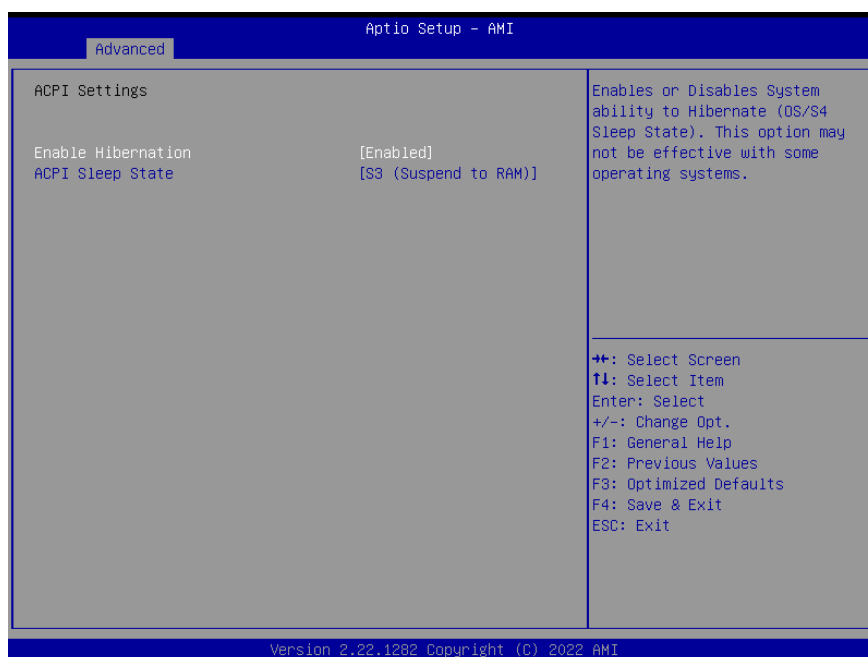

Item	Options	Description
Enable Hibernation	Disabled Enabled[Default],	Enables or Disables System ability to Hibernate (OS/S4 Sleep State). This option may not be effective with some OS.
ACPI Sleep State	Suspend Disabled, S3 (Suspend to RAM)[Default]	Select the highest ACPI sleep state the system will enter when the SUSPEND button is pressed.


3.6.2.6 Super IO Configuration

You can use this item to set up or change the Super IO configuration for serial ports. Please refer to 3.6.2.6.1 ~ 3.6.2.6.2 for more information.




Item	Description
Serial Port 1 Configuration	Set Parameters of Serial Port 1 (COMA).
Serial Port 2 Configuration	Set Parameters of Serial Port 2 (COMB).

3.6.2.6.1 Serial Port 1 Configuration

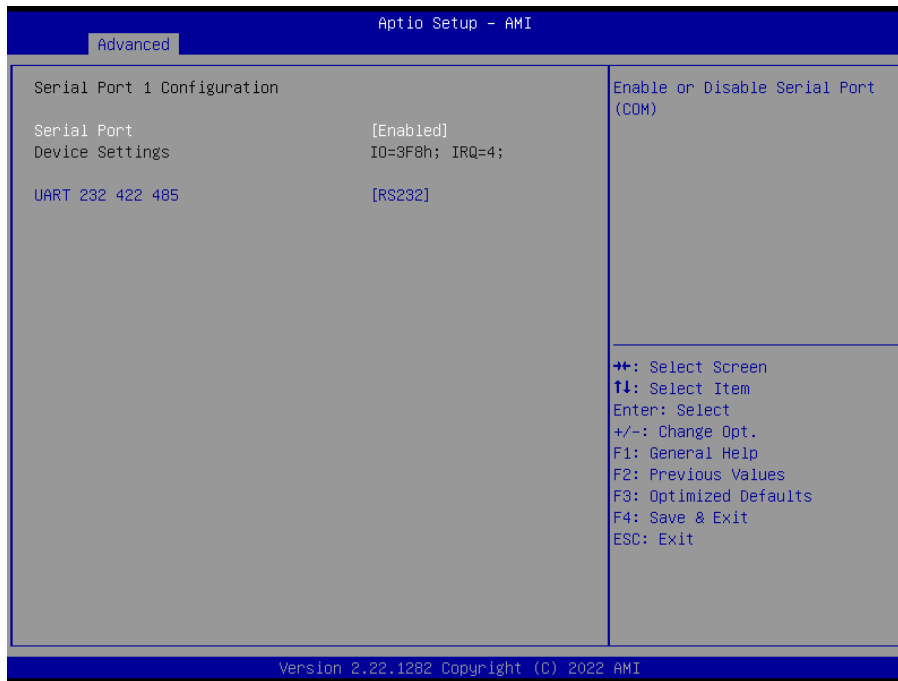


Item	Option	Description
Serial Port	Enabled[Default], Disabled	Enable or Disable Serial Port (COM).
UART 232 422 485	UART 232[Default] UART 422 UART 485	Change the Serial Port as RS232/422/485.

3.6.2.6.2 Serial Port 2 Configuration

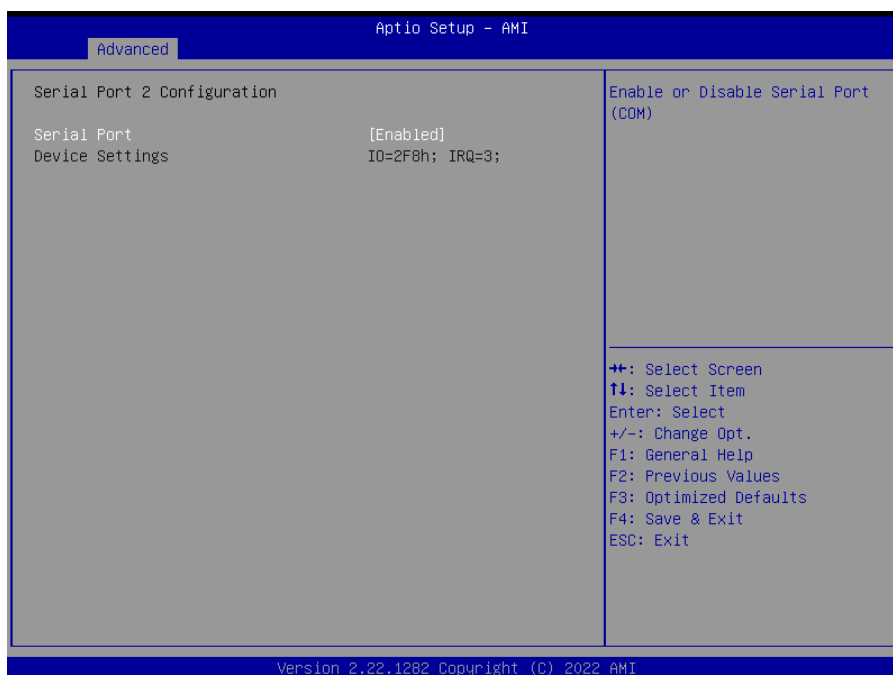

Item	Option	Description
Serial Port	Enabled[Default], Disabled	Enable or Disable Serial Port (COM).

3.6.2.7 NCT6126D HW Monitor

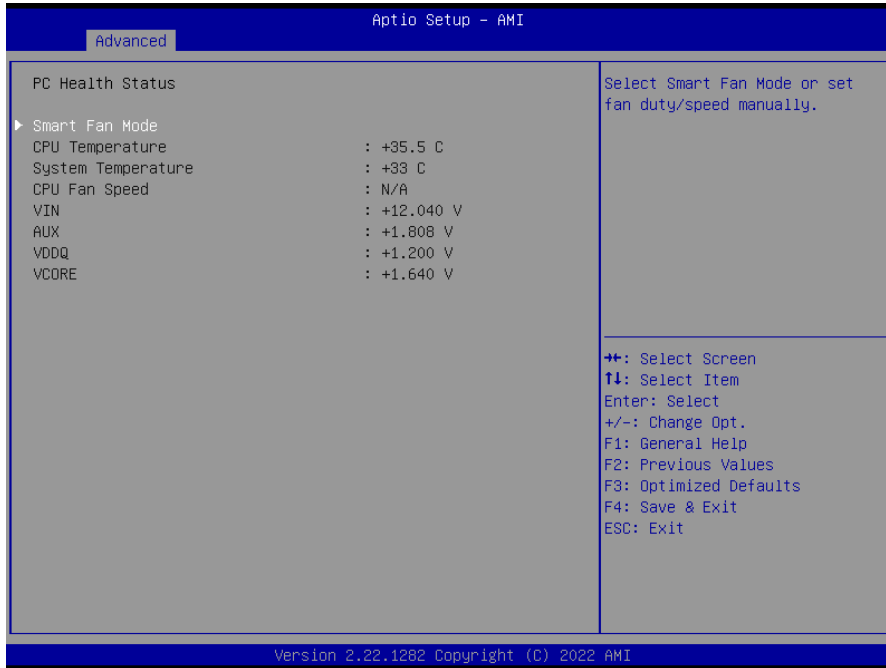

3.6.2.7.1 Smart Fan Mode




Item	Option	Description
CPU Fan Mode	Manual Mode[Default]/Mode 01/Mode 02/Mode 03/Mode 04/Mode 05/Mode 06/Mode 07/Mode 08/Mode 09/Mode 10/Mode 11/Mode 12/Mode 13/Mode	Smart Fan Mode Select: Mode 01 to Mode 20 Or Manual(No Smart Fan).

ACS10-TGU

	14/Mode 15/Mode 16/Mode 17/Mode 18/Mode 19/Mode 20	
CPU Fan Manual Mode Duty	1-255[Default]	Set Fan Duty Manually(1~255).


3.6.2.8 S5 RTC Wake Settings

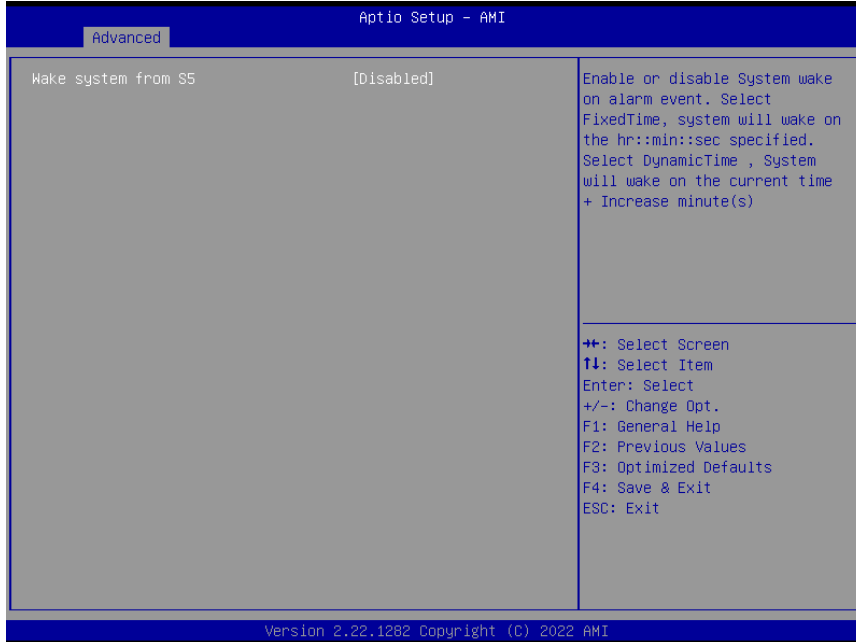

Item	Options	Description
Wake system from S5	Disabled[Default], Fixed Time Dynamic Time	Enable or disable System wake on alarm event. Select Fixed Time, system will wake on the hr::min::sec specified. Select Dynamic Time, System will wake on the current time + Increase minute(s).

3.6.2.9 USB Configuration

The USB Configuration menu helps read USB information and configures USB settings.

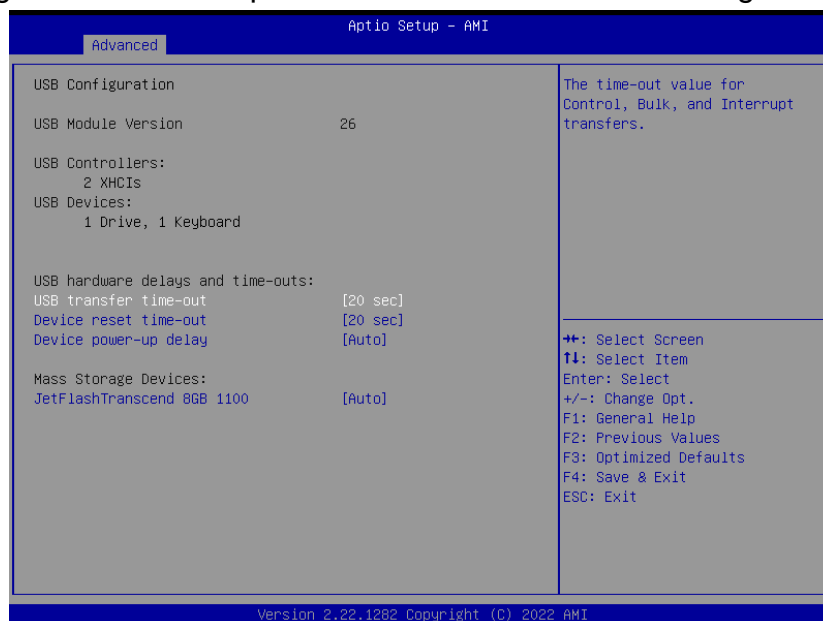


Item	Options	Description
USB transfer time-out	1 sec 5 sec 10 sec 20 sec [Default]	The time-out value for Control, Bulk, and Interrupt transfers.
Device reset time-out	10 sec 20 sec [Default] 30 sec 40 sec	USB mass storage device Start Unit command time-out.
Device power-up delay	Auto [Default] Manual	Maximum time the device will take before it properly reports itself to the Host Controller. 'Auto' uses default value: for a Root port it is 100ms, for a Hub port the delay is taken from Hub descriptor.
Mass Storage Devices	Auto [Default] Floppy Forced FDD Hard Disk CD-ROM	Mass storage device emulation type. 'AUTO' enumerates devices according to their media format. Optical drives are emulated as 'CDROM', drives with no media will be emulated according to a drive type.

3.6.2.10 Network Stack Configuration




Item	Options	Description
Network Stack	Enabled Disabled [Default]	Enable/Disable UEFI Network Stack.


3.6.2.11 NVMe Configuration

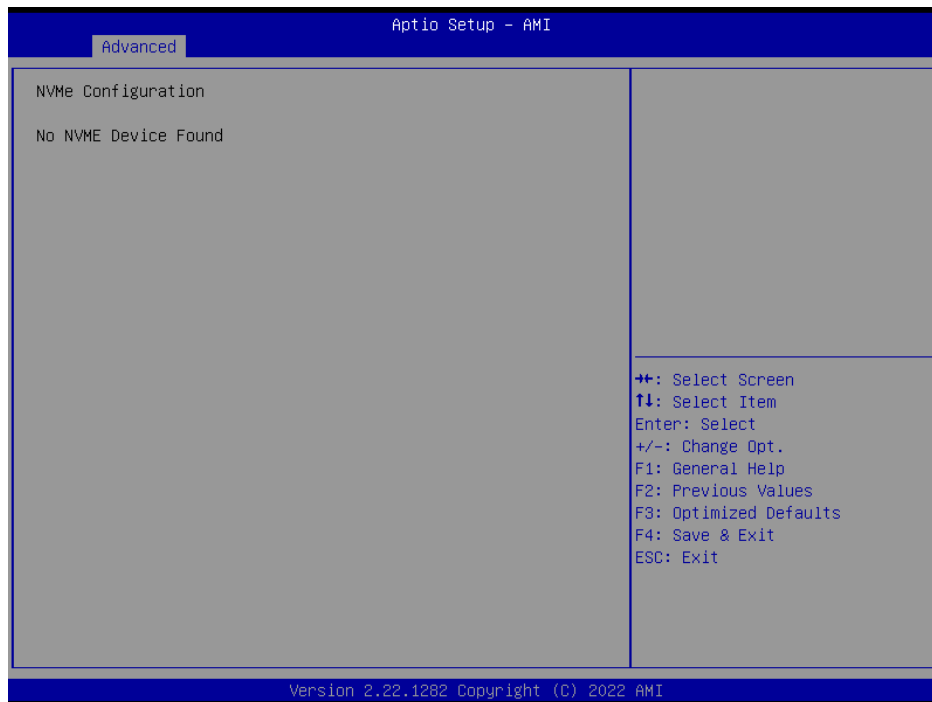

3.6.3 Chipset

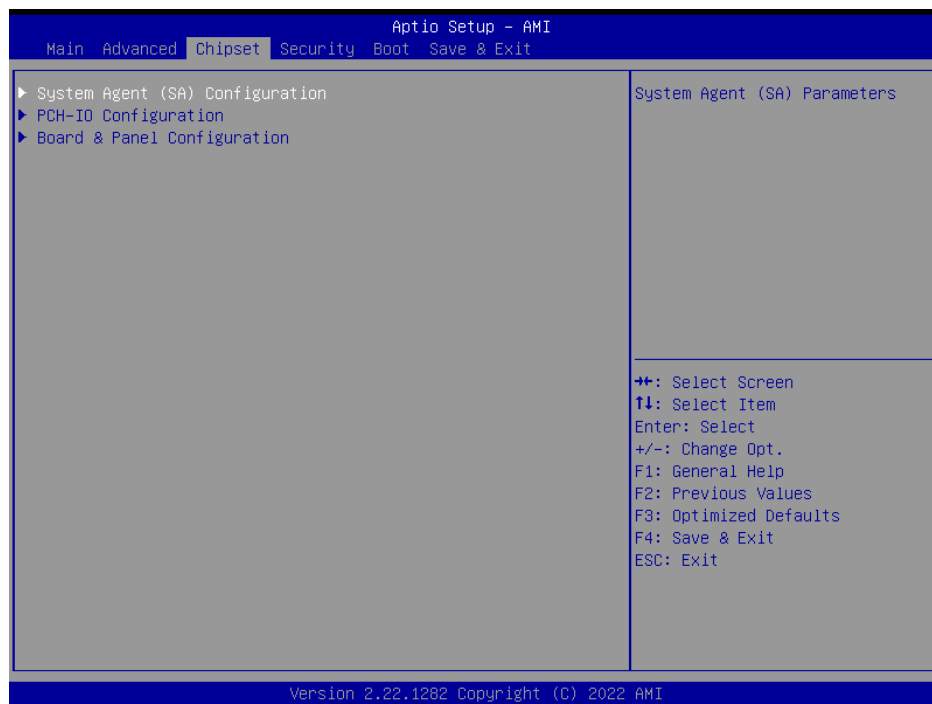


3.6.3.1 System Agent (SA) Configuration

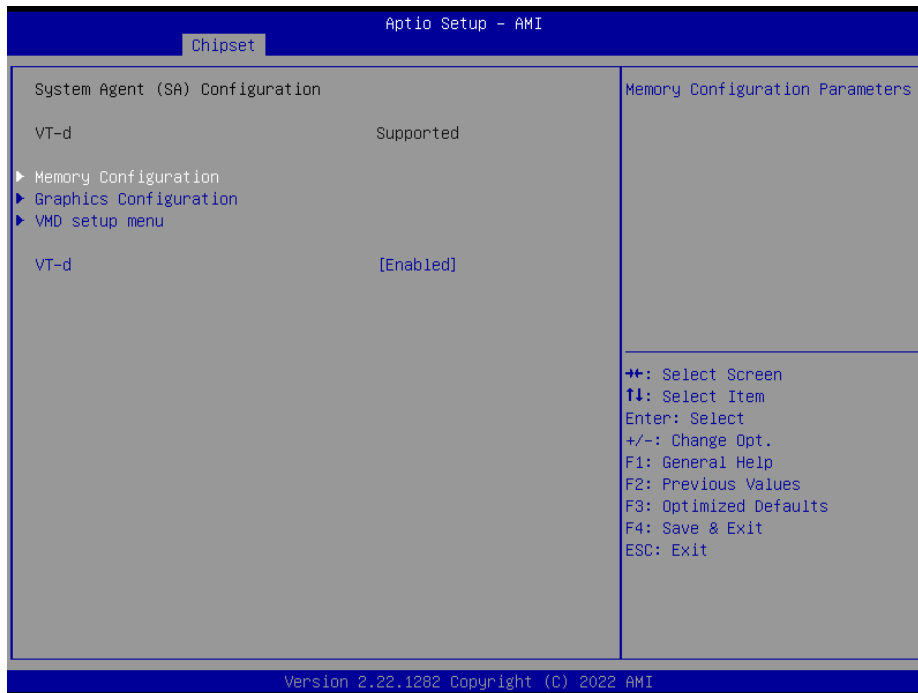


Item	Option	Description
VT-d	Enabled[Default] Disabled	VT-d capability.

3.6.3.1.1 Memory Configuration

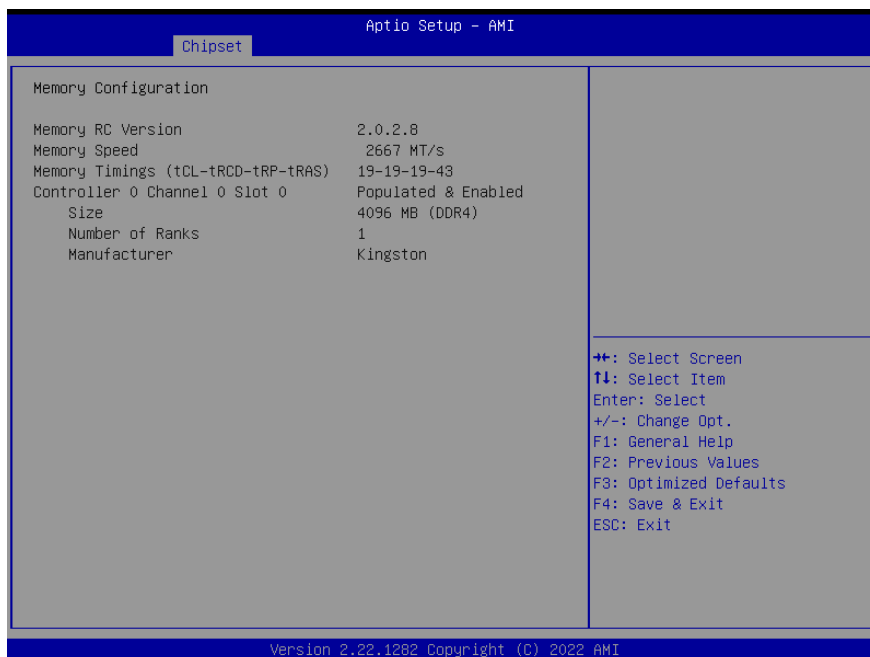


3.6.3.1.2 Graphics Configuration

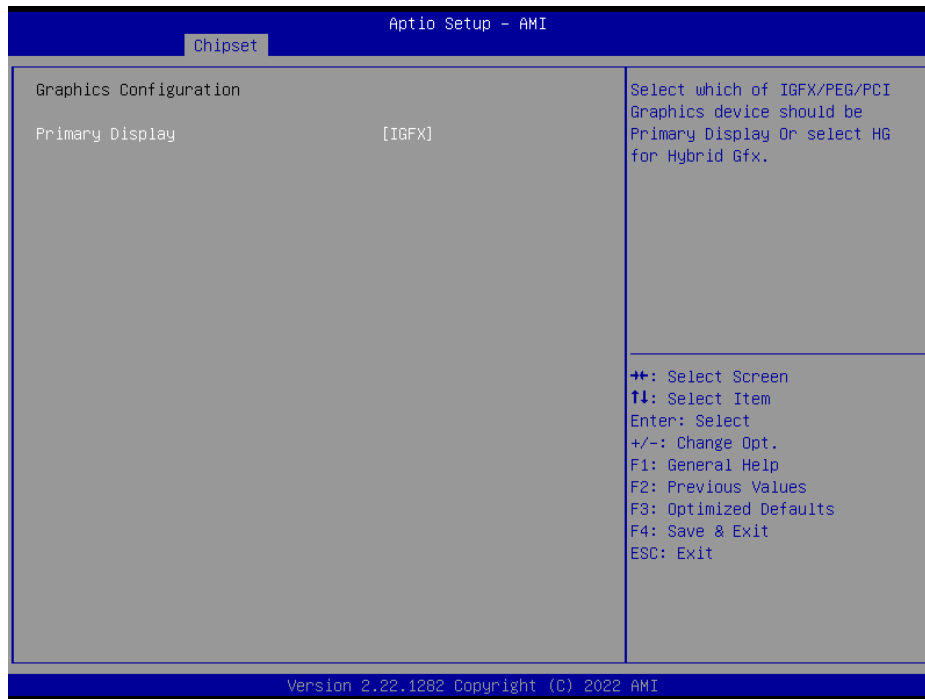

Item	Option	Description
Primary Display	Auto IGFX[Default]	Select which of IFGX/PEG/PCI Graphics device should be Primary Display Or select HG for Hybrid Gfx.

3.6.3.1.3 VMD setup menu

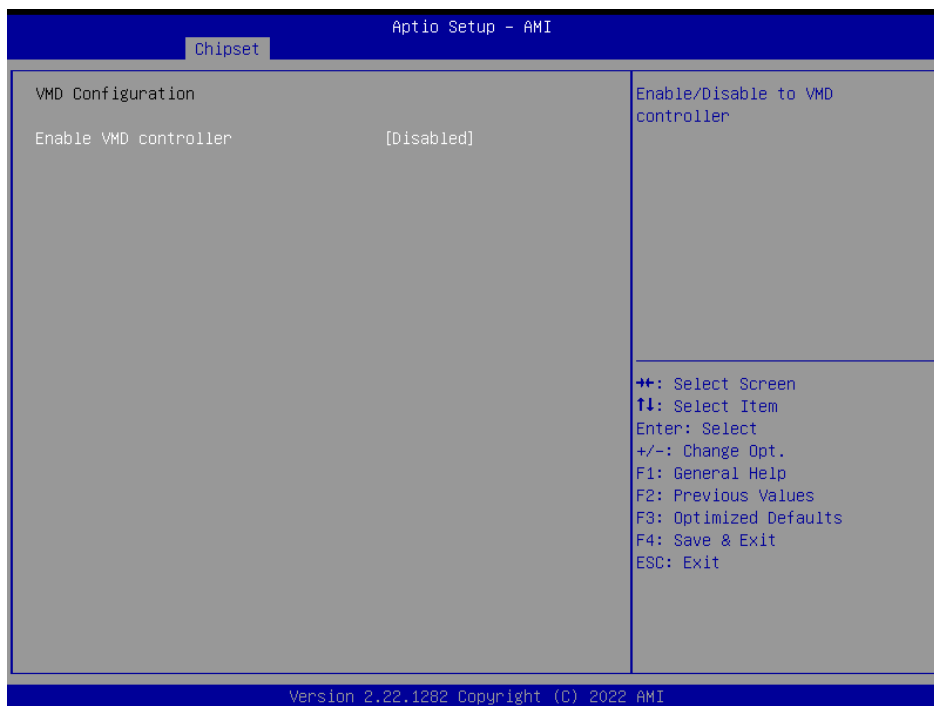

Item	Option	Description
Enable VMD controller	Enabled Disabled[Default]	Enable/Disable VMD controller.

3.6.3.2 PCH-IO Configuration




Item	Option	Description
PCH LAN Controller	Enabled[Default] Disabled	Enable/Disable onboard NIC.

3.6.3.2.1 PCI Express Configuration




3.6.3.2.1.1 PCI Express Root Port 5(M.2 KeyE)

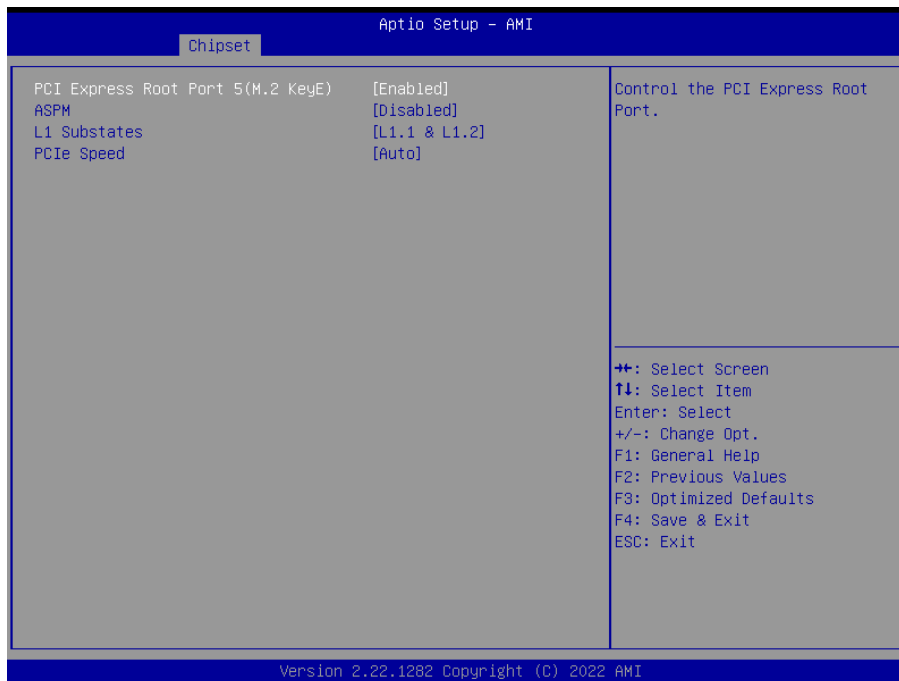


Item	Option	Description
PCI Express Root Port 5(M.2 KeyE)	Enabled[Default], Disabled	Control the PCI Express Root Port.
ASPM	Disabled[Default], L0s L1 L0sL1 Auto	Set the ASPM Level: Force L0s – Force all links to L0s State AUTO – BIOS auto configure DISABLE – Disables ASPM.
L1 Substates	Disabled, L1.1 L1.1 & L1.2[Default]	PCI Express L1 Substates settings.
PCIe Speed	Auto[Default] Gen1 Gen2 Gen3	Configure PCIe Speed.

3.6.3.2.1.2 PCI Express Root Port 8(LAN2-I225/I226)

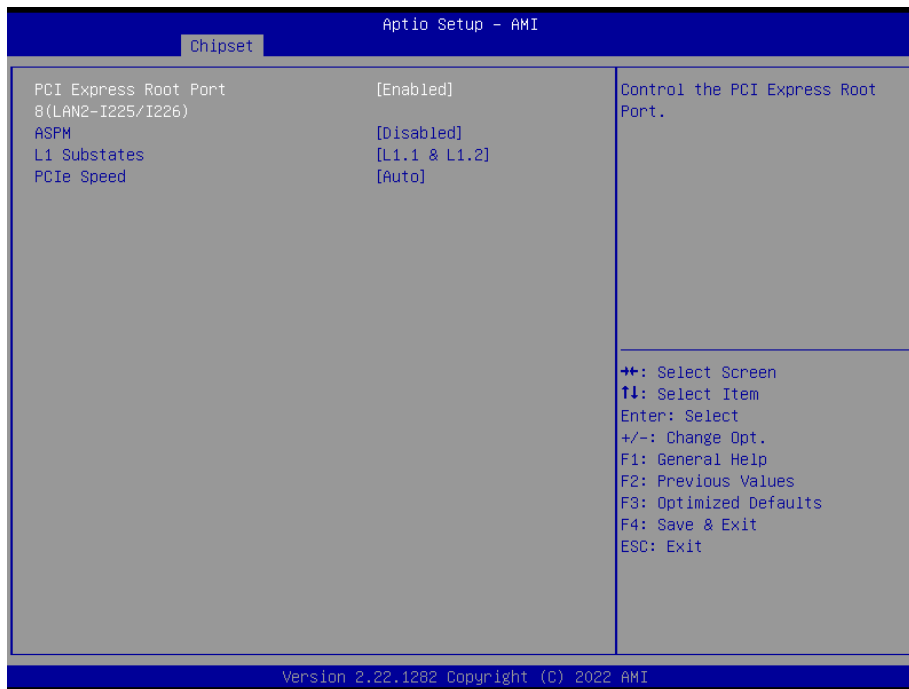


Item	Option	Description
PCI Express Root Port 8(LAN2-I225/226)	Enabled[Default], Disabled	Control the PCI Express Root Port.
ASPM	Disabled[Default], L0s L1 L0sL1 Auto	Set the ASPM Level: Force L0s – Force all links to L0s State AUTO – BIOS auto configure DISABLE – Disables ASPM.
L1 Substates	Disabled, L1.1 L1.1 & L1.2[Default]	PCI Express L1 Substates settings.
PCIe Speed	Auto[Default] Gen1 Gen2 Gen3	Configure PCIe Speed.

3.6.3.2.1.3 PCI Express Root Port 12(M.2 KeyB)

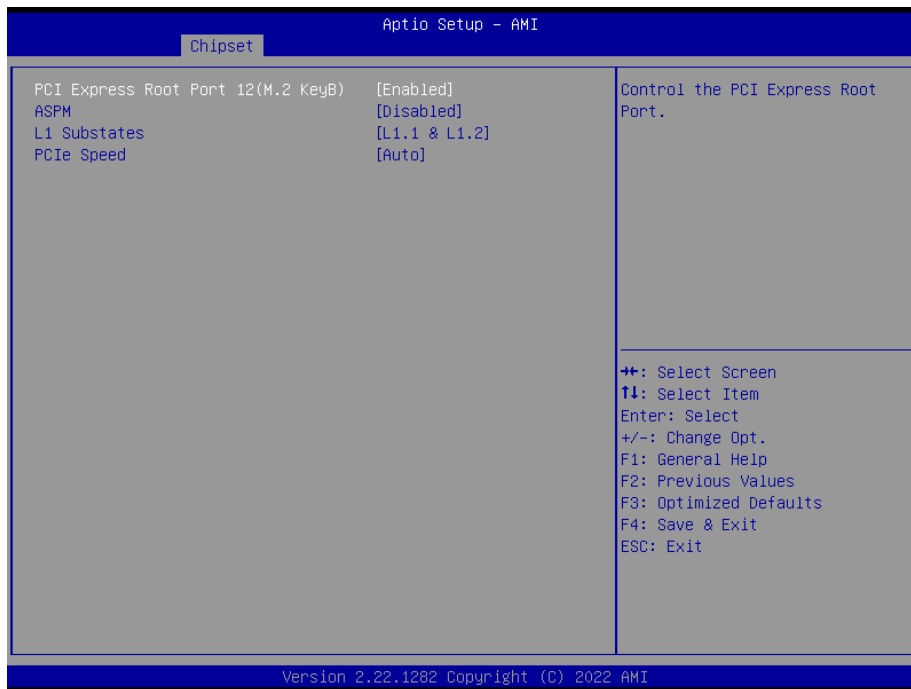

Item	Option	Description
PCI Express Root Port 12(M.2 KeyB)	Enabled[Default], Disabled	Control the PCI Express Root Port.
ASPM	Disabled[Default], L0s L1 L0sL1 Auto	Set the ASPM Level: Force L0s – Force all links to L0s State AUTO – BIOS auto configure DISABLE – Disables ASPM.
L1 Substates	Disabled, L1.1 L1.1 & L1.2[Default]	PCI Express L1 Substates settings.
PCIe Speed	Auto[Default] Gen1 Gen2 Gen3	Configure PCIe Speed.

3.6.3.2.2 SATA And RST Configuration

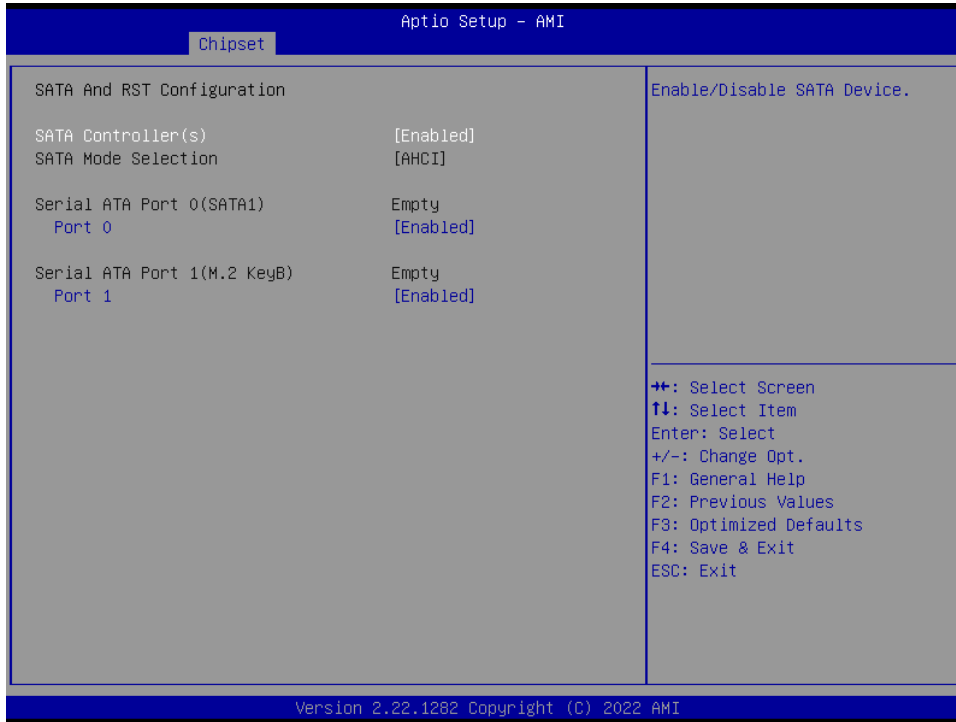

Item	Options	Description
SATA Controller(s)	Enabled[Default] Disabled,	Enable/Disable SATA Device.
Port 0	Enabled[Default] Disabled	Enable or Disable SATA Port.
Port 1	Enabled[Default] Disabled	Enable or Disable SATA Port.


3.6.3.2.3 HD Audio Configuration



ACS10-TGU


Item	Option	Description
HD Audio	Disabled Enabled[Default]	Control Detection of the HD-Audio device. Disable = HDA will be unconditionally disabled Enabled = HDA will be unconditionally enabled.

3.6.3.3 Board & Panel Configuration

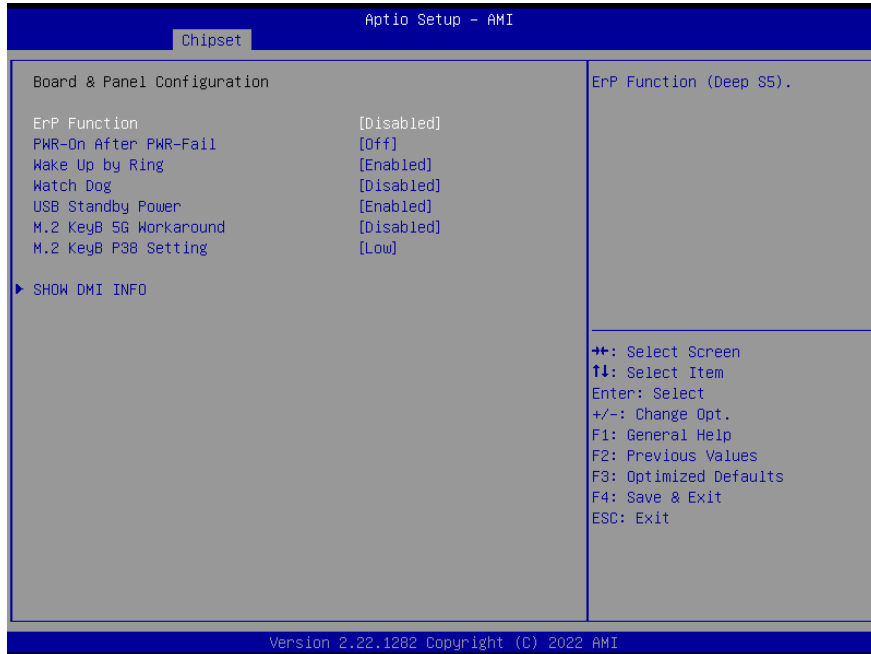

Item	Option	Description
ErP Function	Disabled[Default] Enabled	ErP Function (Deep S5).
PWR-On After PWR-Fail	Off[Default] On Last state	AC loss resume.
Wake Up by Ring	Disabled Enabled[Default]	Wake Up by Ring from S3/S4/S5.
Watch Dog	Disabled[Default] 30 sec 40 sec 50 sec 1 min 2 min 10 min 30 min	Select WatchDog.
USB Standby Power	Disabled Enabled[Default]	Enable/Disabled USB Standby Power during S3/S4/S5.
M.2 KeyB 5G Workaround	Disabled[Default] Enabled	Enable/Disabled M.2 KeyB 5G Card Workaround.
M.2 KeyB P38 Setting	Low[Default] High	Set M.2 KeyB Pin38(DEVSLP) as Low/High.

3.6.3.3.1 SHOW DMI INFO

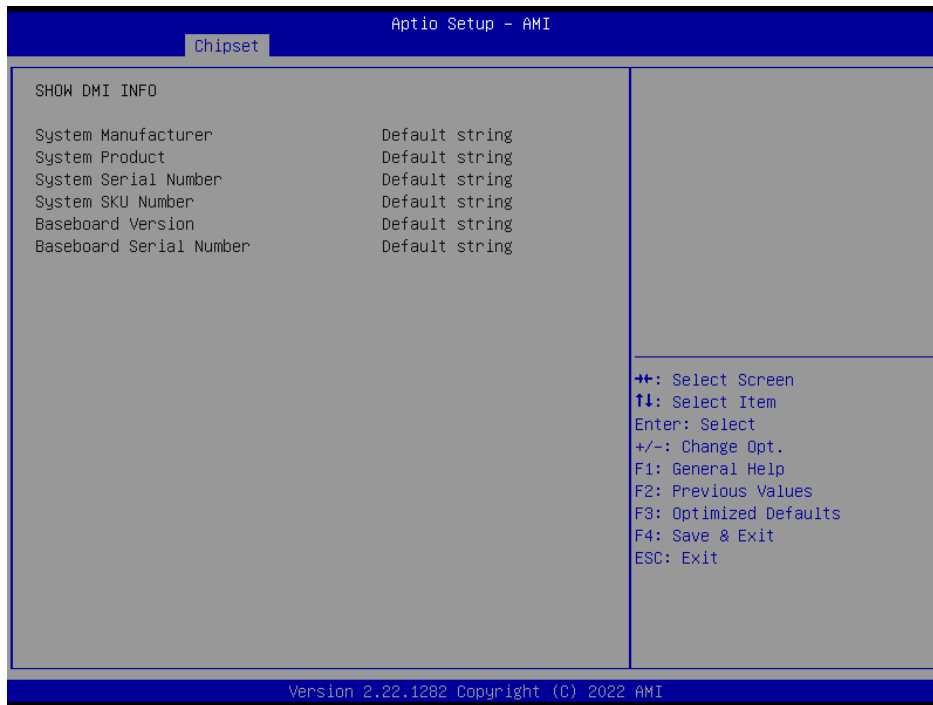

3.6.4 Security




- **Administrator Password**

Set setup Administrator Password

- **User Password**


Set User Password

3.6.4.1 Secure Boot

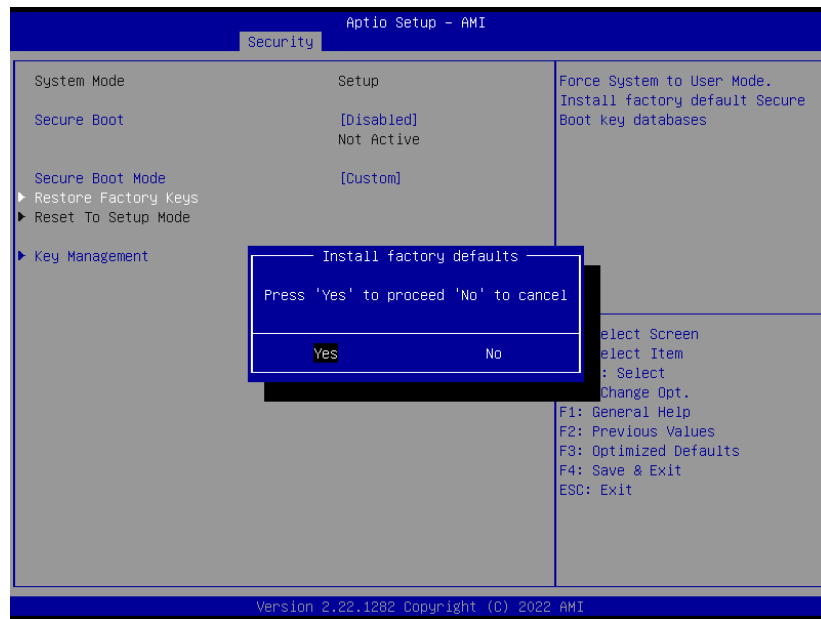


Item	Option	Description
Secure Boot	Disabled[Default] Enabled	Secure Boot feature is Active if Secure Boot is Enable, Platform Key(PK) is enrolled and the System is in User mode. The mode change requires platform reset.
Secure Boot Mode	Standard Custom[Default]	Secure Boot mode selector: Standard/Custom. In Custom mode Secure Boot Variables can be configured without authentication.

3.6.4.1.1 Key Management

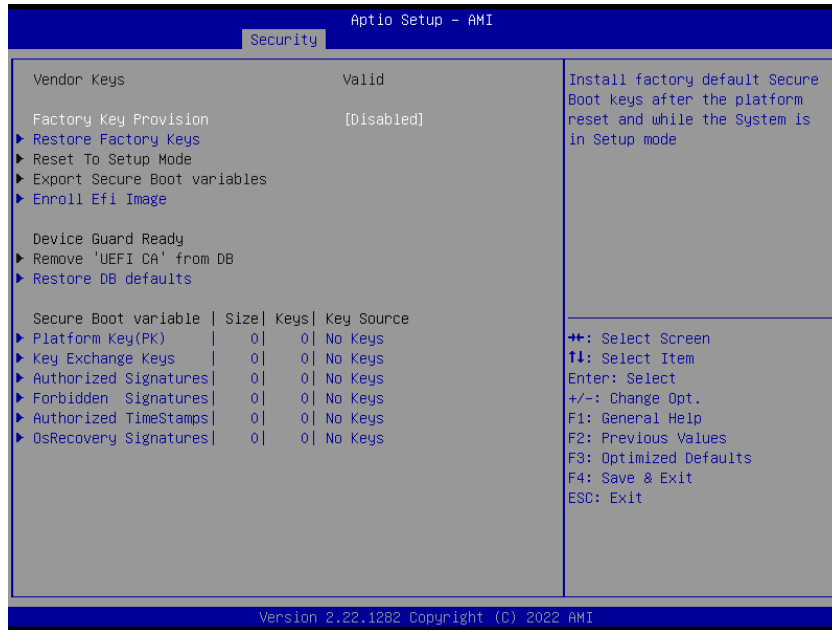

Item	Option	Description
Factory Key Provision	Disabled[Default] Enabled	Install factory default Secure Boot keys after the platform reset and while the System is in Setup mode.

3.6.5 Boot


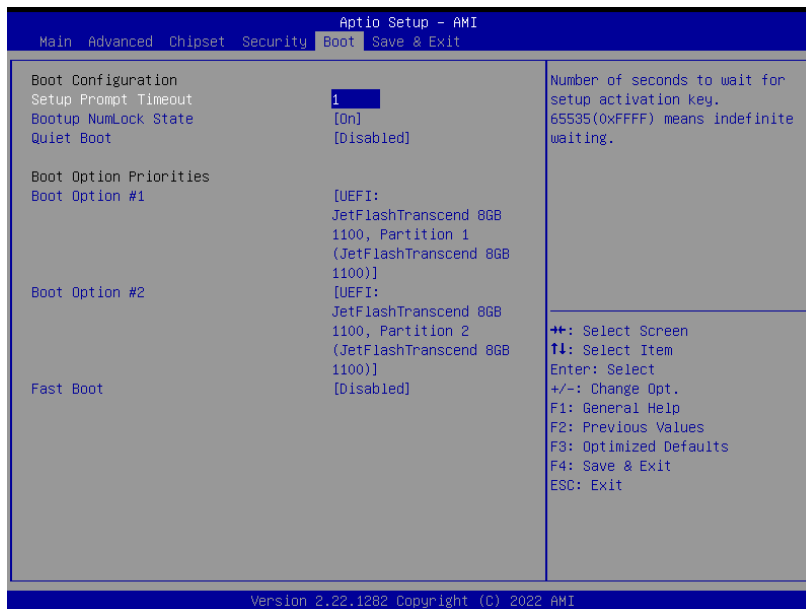


Item	Option	Description
Setup Prompt Timeout	1~ 65535	Number of seconds to wait for setup activation key. 65535(0xFFFF) means indefinite waiting.
Bootup NumLock State	On[Default] Off	Select the keyboard NumLock state

ACS10-TGU

Quiet Boot	Disabled[Default] Enabled	Enables or disables Quiet Boot option
Fast Boot	Disabled[Default] Enabled	Enables or disables boot with initialization of a minimal set of devices required to launch active boot option. Has no effect for BBS boot optios.
Boot Option #1/2	Set the system boot order.	

3.6.6 Save and exit

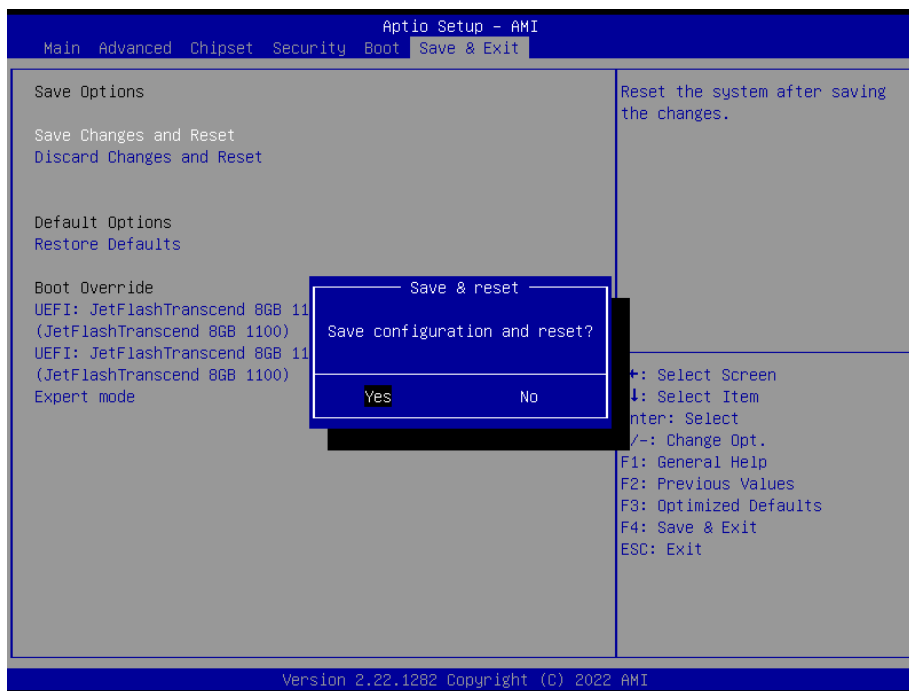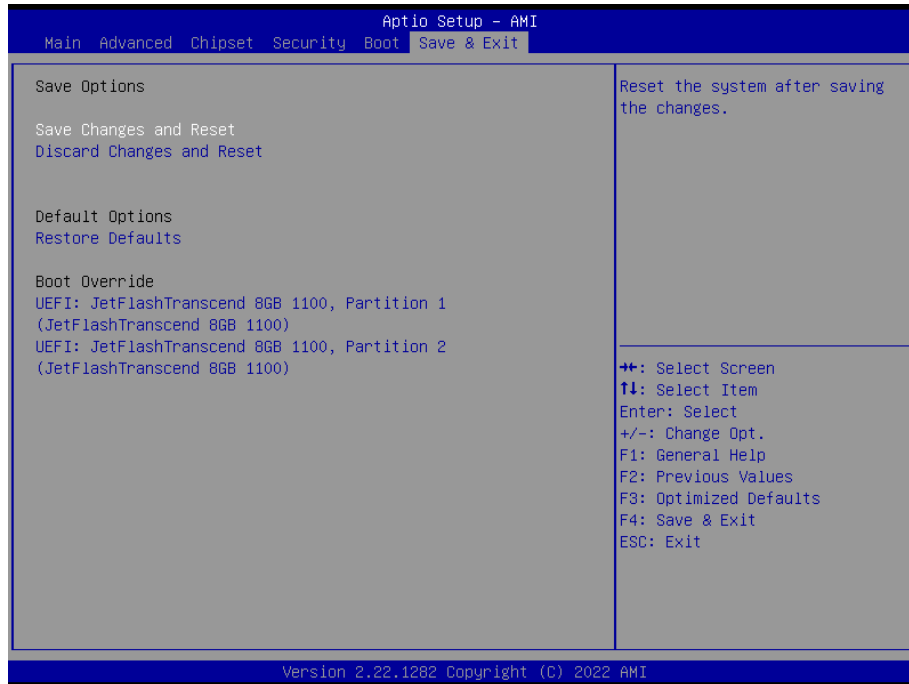

3.6.6.1 *Save Changes and Reset*

Reset the system after saving the changes.

3.6.6.2 *Discard Changes and Reset*

Any changes made to BIOS settings during this session of the BIOS setup program are discarded. The setup program then exits and reboots the controller.

3.6.6.3 *Restore Defaults*

This option restores all BIOS settings to the factory default. This option is useful if the controller exhibits unpredictable behavior due to an incorrect or inappropriate BIOS setting.

3.6.6.4 *Launch EFI Shell from filesystem device*

Attempts to Launch EFI Shell application (Shellx64.efi) from one of the available filesystem devices.

4. Drivers Installation



Note: Installation procedures and screen shots in this section are for your reference and may not be exactly the same as shown on your screen.


4.1 Install Chipset Driver

All drivers can be found on the Avalue Official Website:

<http://www.avalue.com.tw>.



Note: The installation procedures and screen shots in this section are based on Windows 10 operation system. If the warning message appears while the installation process, click Continue to go on.

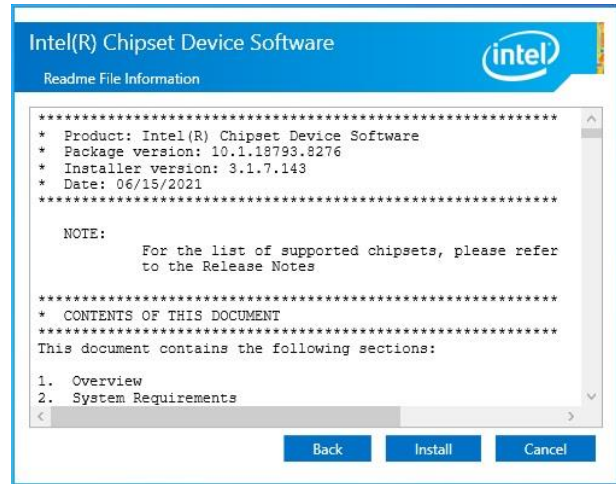

Step 3. Click Install.



Step1. Click Next.



Step 4. Complete setup.



Step 2. Click Accept.


4.2 Install VGA Driver

All drivers can be found on the Avalue Official Website:

<http://www.avalue.com.tw>.




Note: The installation procedures and screen shots in this section are based on Windows 10 operation system. If the warning message appears while the installation process, click Continue to go on.

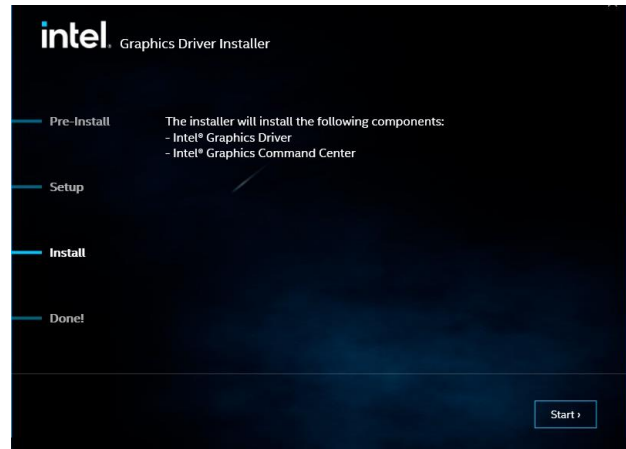


Step 3. Click Start.



Step 1. Click Begin installation.

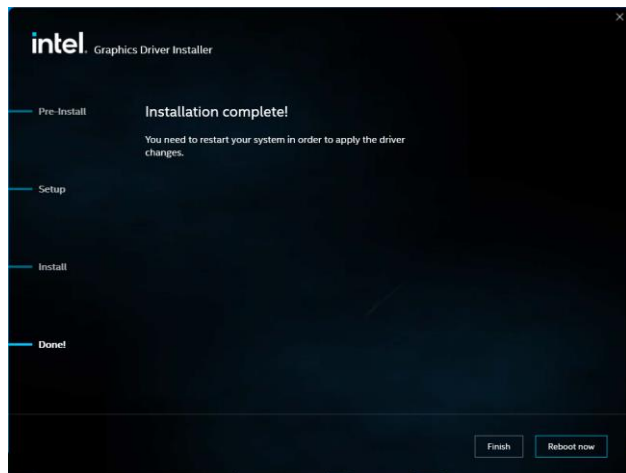

Step 4. Click Reboot now.

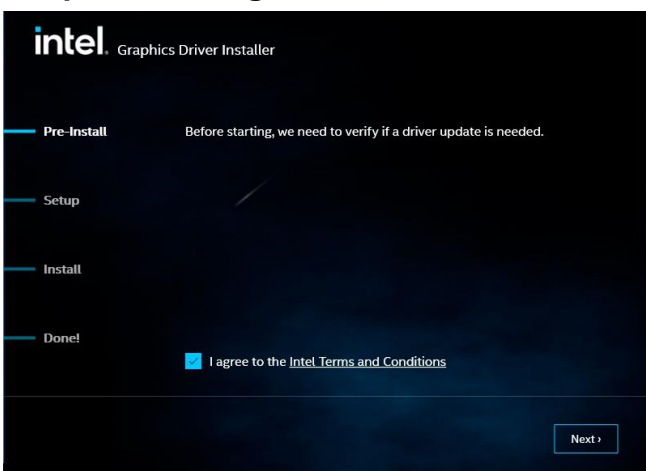

Step 2.
Click **Next** to accept license agreement.


4.3 Install ME Driver

All drivers can be found on the Avalue Official Website:

<http://www.avalue.com.tw>.




Note: The installation procedures and screen shots in this section are based on Windows 10 operation system. If the warning message appears while the installation process, click Continue to go on.

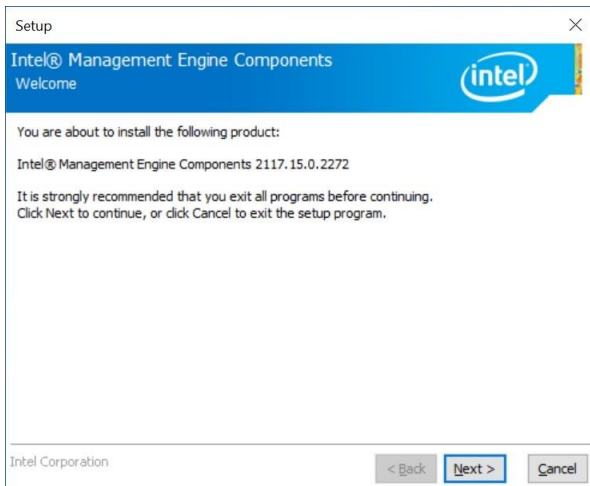


Step 1. Click **Next** to continue setup.



Step 2. Click **Next**.

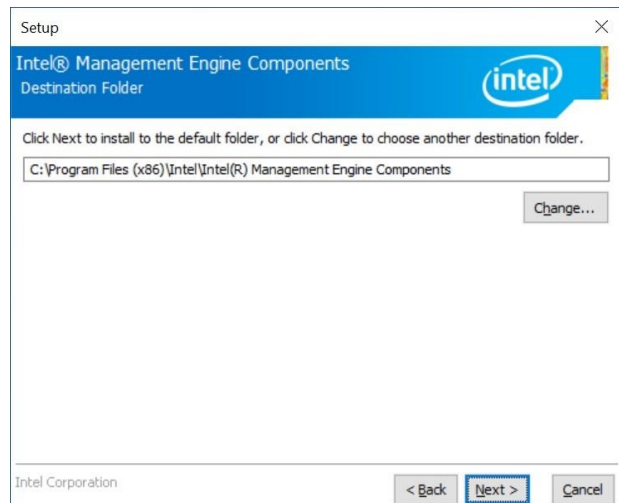

Step 3. Click **Next**.

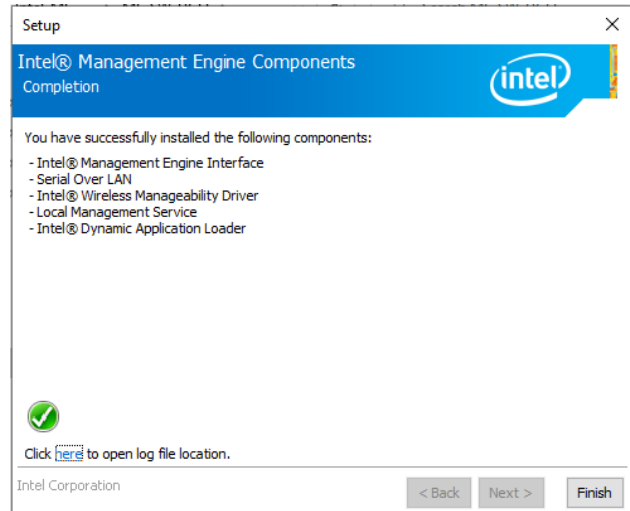


Step 4. Click **Finish** to complete setup.

4.4 Install LAN Driver


All drivers can be found on the Avalue Official Website:
<http://www.avalu.com.tw>.




Note: The installation procedures and screen shots in this section are based on Windows 10 operation system. If the warning message appears while the installation process, click Continue to go on.

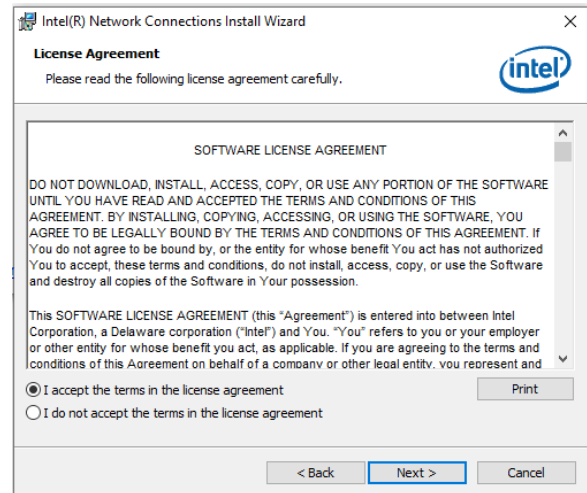


Step 3. Click Next.

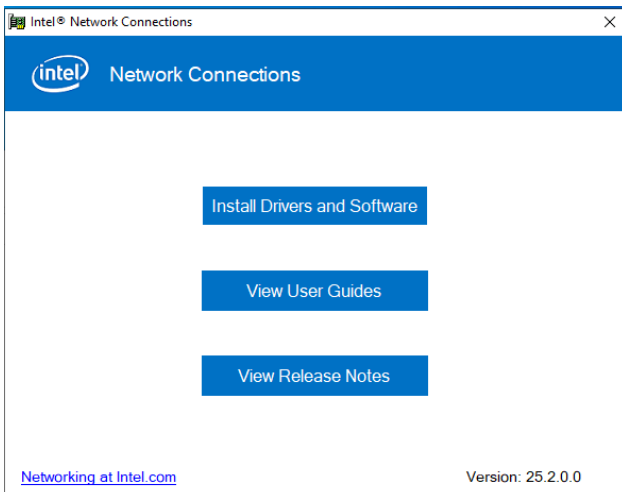


Step 1. Click Next to continue installation.

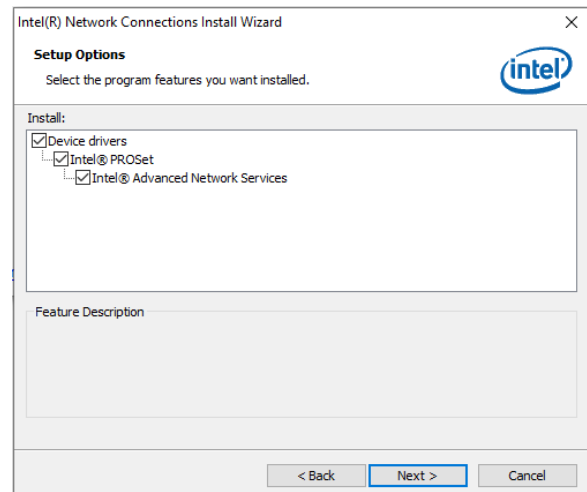


Step 4. Click Yes.

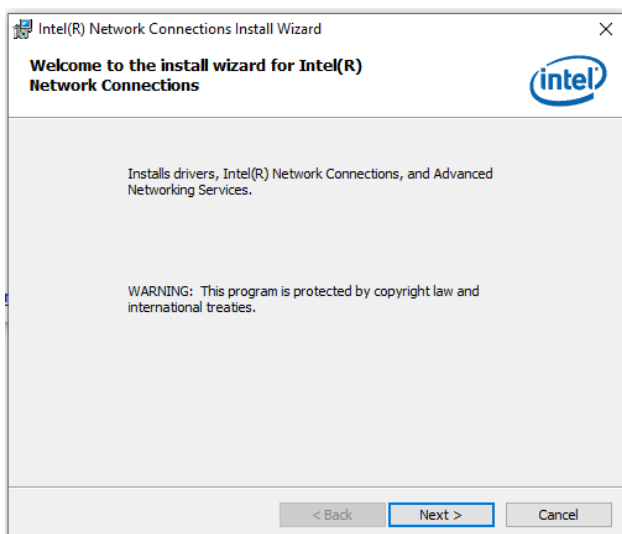

Step 2. Click Next.

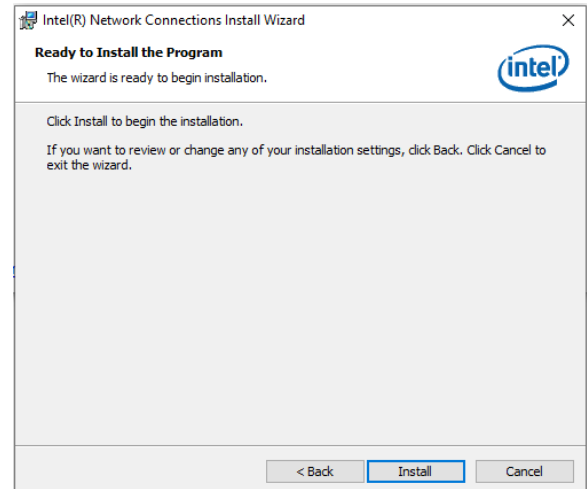

Step 5. Click Install.

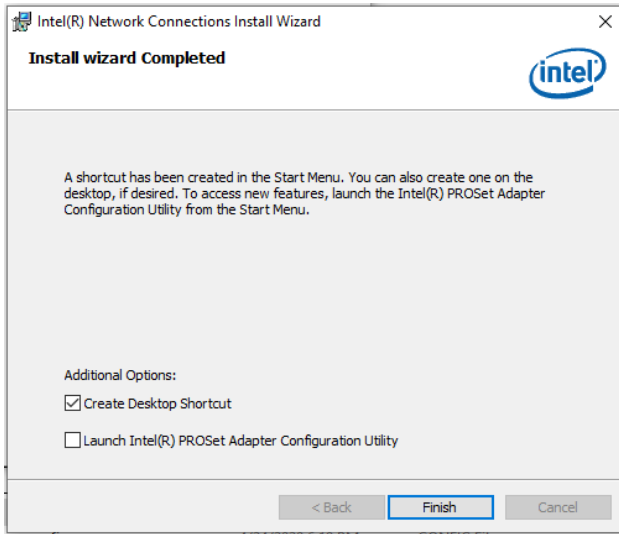

Step 6. Click **Finish** to complete setup.


4.5 Install Serial IO Driver

All drivers can be found on the Avalue Official Website:


<http://www.avalu.com.tw>.




Note: The installation procedures and screen shots in this section are based on Windows 10 operation system. If the warning message appears while the installation process, click Continue to go on.

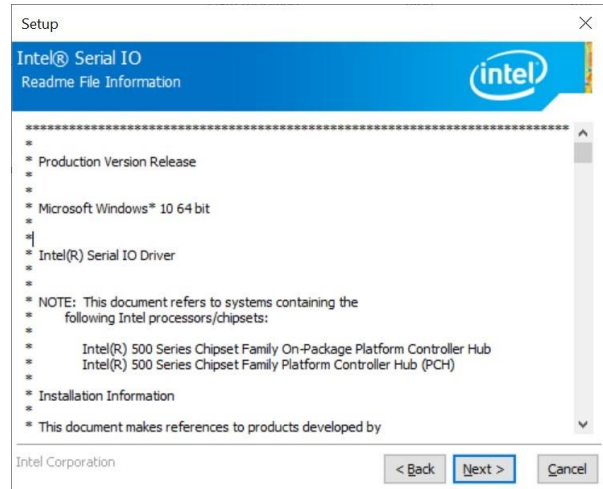

Step 3. Click Next.

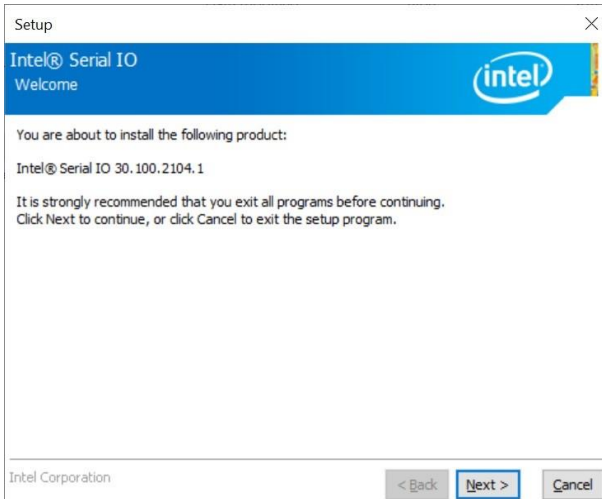


Step 1. Click Next to continue installation.

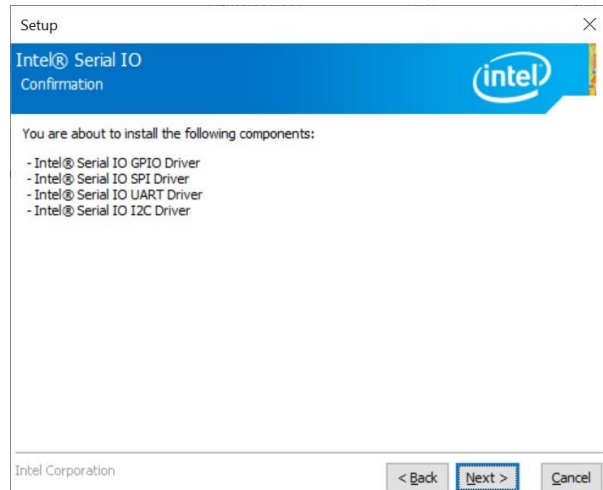

Step 4. Click Next.



Step 2. Click Next.

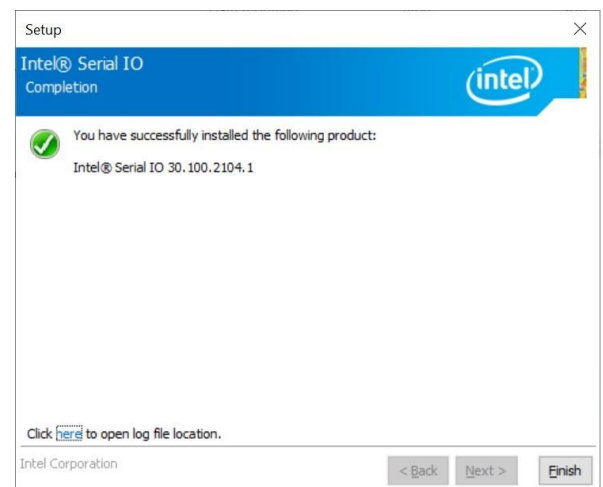

Step 5. Click Finish to complete setup.


4.6 Install Audio Driver (For Realtek ALC888S)

All drivers can be found on the Avalue Official Website:


<http://www.avalu.com.tw>.



Note: The installation procedures and screen shots in this section are based on Windows 10 operation system.

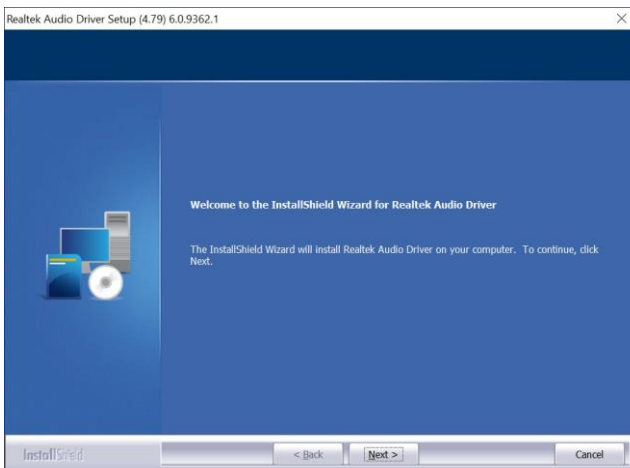

Step 1. Click **Next** to continue setup.

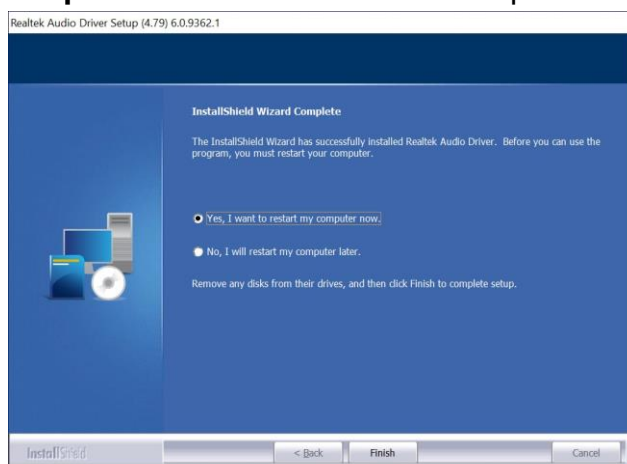

Step 2. Click **Finish** to complete the setup.


4.7 Install Realtek Audio Control Driver

All drivers can be found on the Avalue Official Website:


<http://www.avalue.com.tw>.



Note: The installation procedures and screen shots in this section are based on Windows 10 operation system.

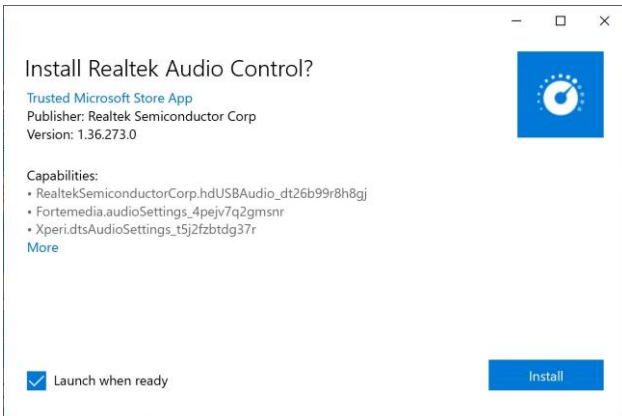

Step 1. Click Install.

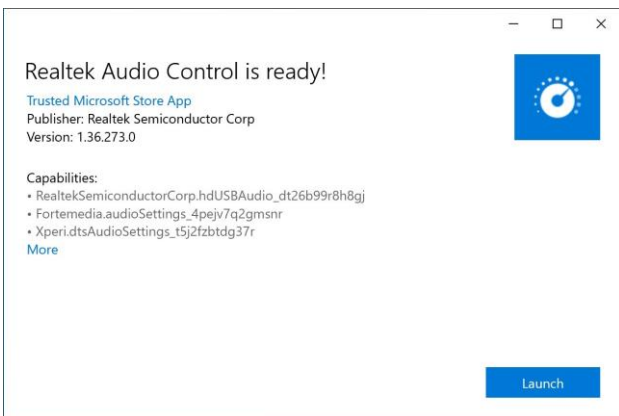

Step 2. Complete setup.

